

Component key for wiring diagrams 1 to 29

Note: Not all the items listed will be fitted to all models

No	Description	No	Description
00200	Alternator with built-in regulator	03319	Horn push button
00500	Battery	03500	Ignition switch
01001	Starter motor	03505	Butterfly valve cut-off switch
01202	Rear front electric window motor	03506	Throttle position switch
01203	Left front electric window motor	03530	Right front electric window switch
01206	Windscreen wiper motor	03531	Left front electric window switch
01207	Rear screen wiper motor	03546	Rear screen wash/wipe switch
01252	Right front door locking motor	03550	Hazard warning lights switch
01253	Left front door locking motor	04010	Steering column switch unit, direction indicators
01254	Right rear door locking motor	04022	Steering column switch unit, headlamps, main beam and dipped, side lights
01255	Left rear door locking motor	04032	Steering column switch unit, windscreen wash/wipe
01400	Windscreen washer pump	04214	Fuel injection system control relay
01401	Rear screen washer pump	04215	Antiskid system failure relay
01420	Electric fuel pump	04225	Radiator fan 2nd speed engagement relay feed
01500	Engine cooling fan	04241	Foglamps relay feed
01502	Injector cooling fan	04260	Electric windows motor relay feed
01504	Ventilation fan	04283	Antiskid system relay
02001	Engine cut-out solenoid on injection pump	04291	Horn relay feed
02010	Fuel injector	04292	Heated rear screen relay feed
02011	Fuel injector	04441	Dim-dip cut-out 04600 Ignition distributor
02012	Fuel injector	04700	Coolant temperature sender unit
02013	Fuel injector	04701	Electronic injection coolant temperature sender unit
02015	Supplementary air valve	04720	Oil pressure sender unit
02210	Accelerator pump outlet cut-out solenoid on carburettor	05008	Right headlamp, main beam and dipped with side light
02215	Supplementary air valve	05009	Left headlamp, main beam and dipped with side light
02400	Ignition coil	05013	Abnormal fuel consumption sensor
02405	Ignition coil with electronic control unit	05015	Right foglamp
02490	Static advance ignition control unit	05016	Left foglamp
02492	Microplex ignition system control unit	05410	Right front direction indicator
03000	Insufficient engine oil pressure switch	05411	Left front direction indicator
03002	Right front door ajar switch	05412	Right front side direction indicator
03003	Left front door ajar switch	05413	Left front side direction indicator
03004	Right rear door ajar switch	05640	Rear number plate lamp
03005	Left rear door ajar switch	05690	Right rear light cluster, sidelight, direction indicator, brake light, rear foglamp
03006	Handbrake 'on' warning switch	05691	Left rear light cluster; side light, direction indicator, brake light, rear foglamp
03007	Brake stop-lamp switch	06000	Centre courtesy light
03008	Reversing light switch	06026	Map reading light
03028	Radiator thermostatic switch	06076	Ideogram fibre optic light
03029	Coolant overheating warning light thermostatic switch	06080	Heater controls light
03034	Injector cooling fan thermostatic switch	06084	Instrument panel light
03035	Accelerator pump outlet cut-out solenoid thermostatic switch	06300	Sidelights warning light
03036	Radiator thermostatic switch with two operating ranges	06305	Main beam headlamps warning light
03053	Map reading light switch	06310	Rear foglamps warning light
03059	Foglamps switch	06311	Foglamps warning light
03060	Rear foglamp switch	06315	Hazard warning lights warning light
03110	Heated rear screen switch	06320	Direction indicators warning light
03114	Ventilation fan switch	06335	Insufficient brake fluid level warning light
03123	Air pressure switch	06336	Handbrake 'on' warning light
03142	Choke warning light switch	06343	Insufficient engine oil pressure warning light
03144	Reset switch	06344	Insufficient brake fluid level warning light
03145	Display switch	06345	Fuel reserve warning light
03305	Right front door open light push button	06350	Coolant overheating warning light
03306	Left front door open light push button		


Component key for wiring diagrams 1 to 29 (continued)*Note: Not all the items listed will be fitted to all models*

No	Description	No	Description
06355	Battery charging warning light	08051	Ignition coil condenser
06365	Choke warning light	09000	Dim-dip transformer
06368	Antiskid system failure lamp	09008	Radiator cooling fan 1st speed resistor
06385	Heated rear screen warning light	09100	Heated rear screen
06800	Horn	10022	Cut-off device electronic control unit
06801	Right horn	10500	Control (fuse) box
06802	Left horn	10515	Electronic injection control unit
07000	Coolant level sensor	10571	Central locking control unit
07001	Engine oil level sensor	10584	Antiskid system ECU
07003	Brake fluid level sensor	10586	Pressure modulators
07015	Right front brake pad wear sensor	59000	Cigar lighter
07016	Left front brake pad wear sensor	60000	Instrument panel
07020	Engine speed sensor	60204	Four place fusebox
07021	TDC sensor	70090	General earth
07022	Anti-knock sensor	70091	General earth
07023	Diagnostic socket	70092	Earth plate
07037	Butterfly valve (cut-off) switch	M	Electronic control unit
07050	Fuel gauge		
07051	Instant fuel consumption gauge (econometer)		
07052	Airflow meter		
07060	Idle cut-off device		
07107	Roadwheel speed sensors		
07109	Vacuum switch		
07191	Absolute pressure sensor		
07192	Vacuum switch		
07400	Fuel gauge		
07410	Engine oil temperature gauge		
07415	Coolant temperature gauge		
07420	Engine oil pressure gauge		
07430	Tachometer		
07460	Clock		
07461	Digital clock		


Wire colour codes

A	Light blue
B	White
C	Orange
G	Yellow
H	Grey
L	Blue
M	Brown
N	Black
R	Red
S	Pink
V	Green
Z	Violet


Example of two-colour wire: BN (White/Black)

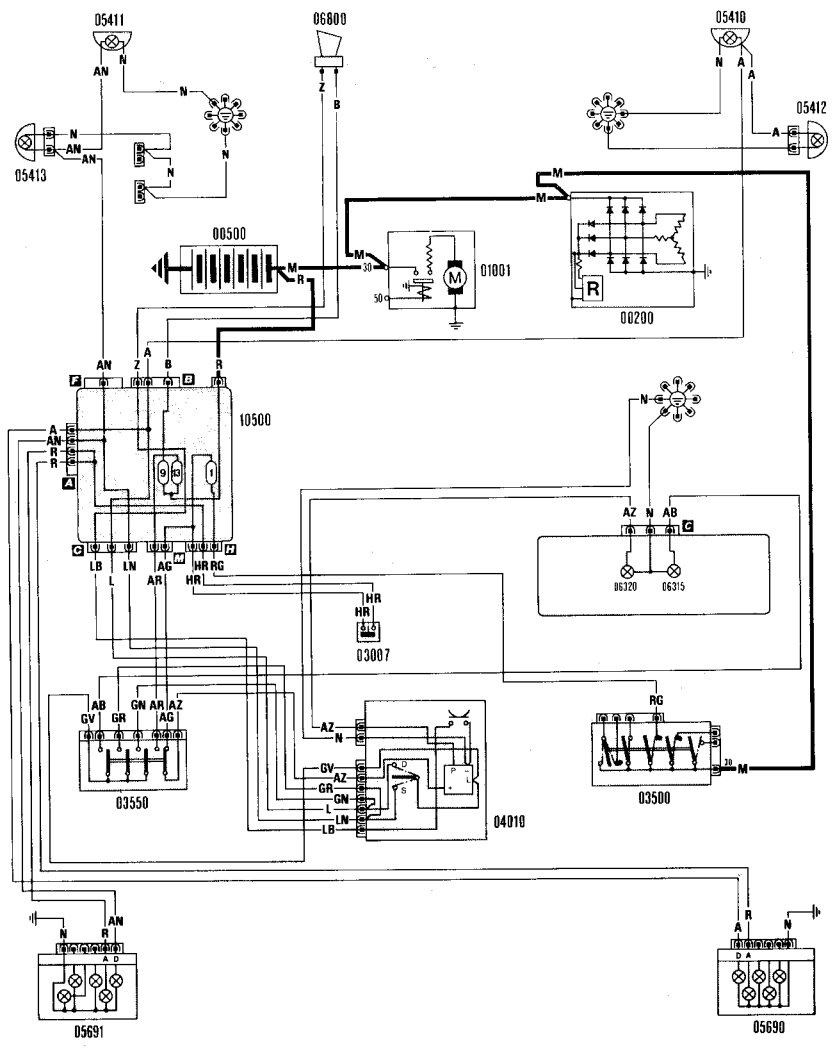


Wiring diagram 3 - direction indicators, hazard warning lamps, brake stop-lamps and horn (S and SX models)

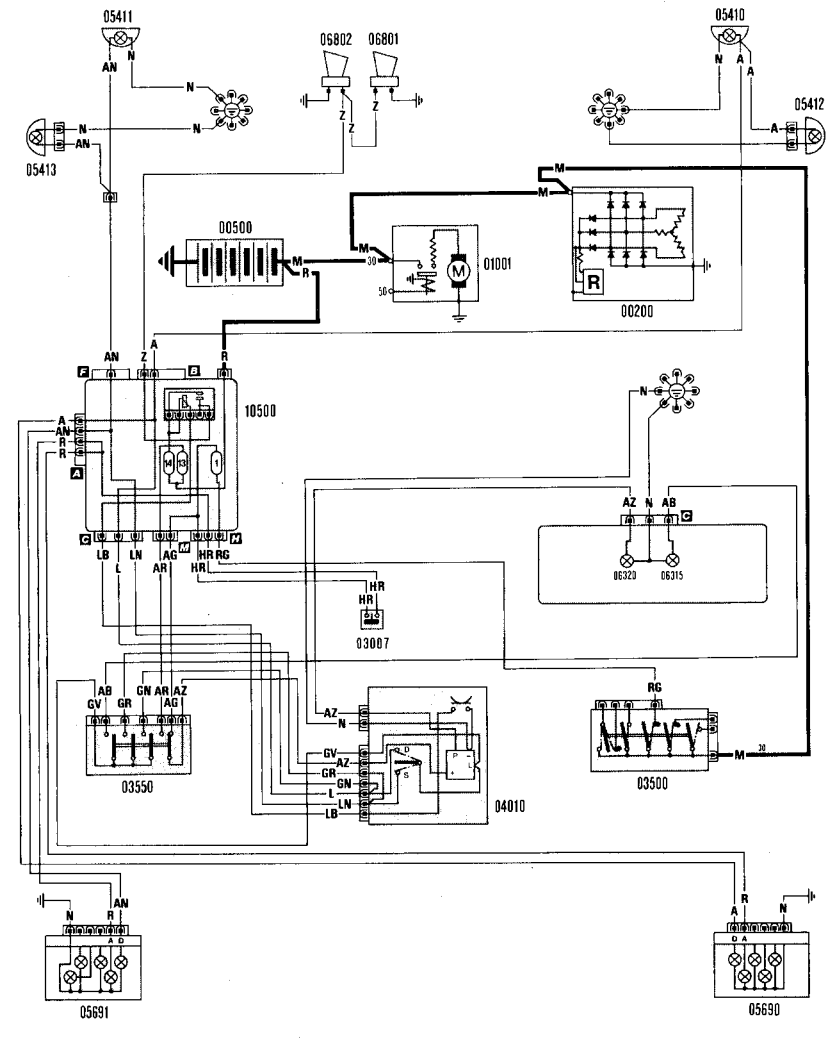


Wiring diagram 4 - direction indicators, hazard warning lamps, brake stop-lamps and horn (Comfort and ES)

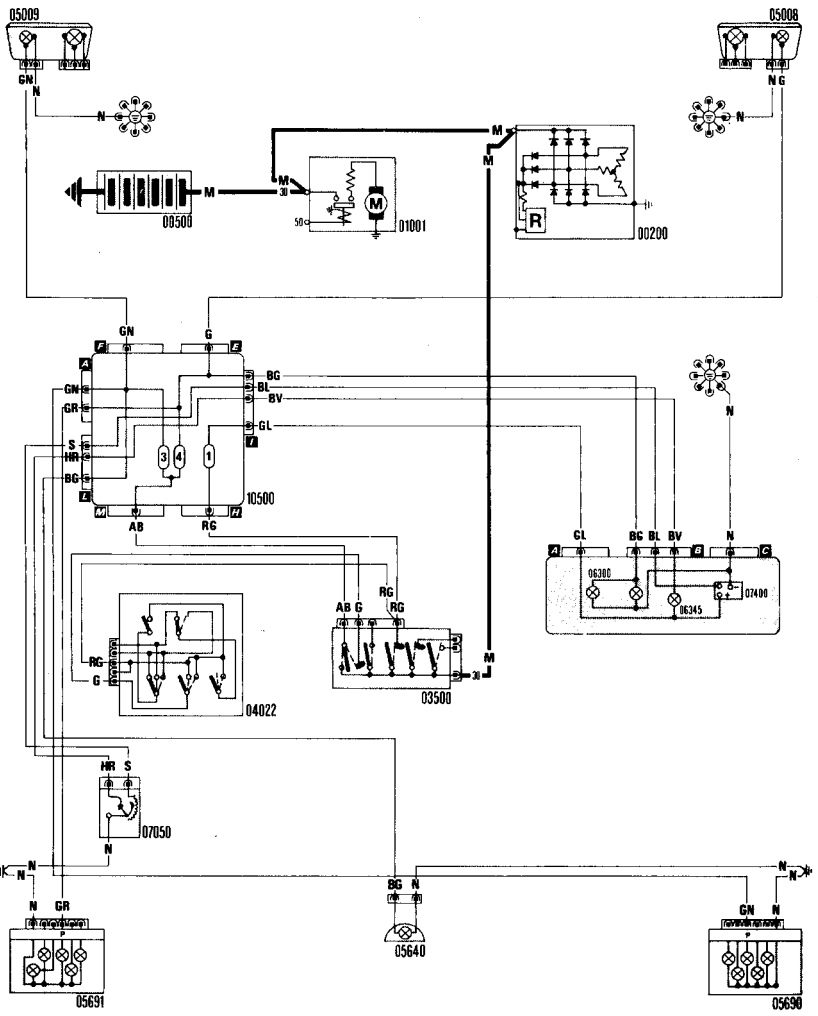


Wiring diagram 5 - front parking lamps, rear number plate lamp and fuel gauge (Comfort, ES, S and SX models)

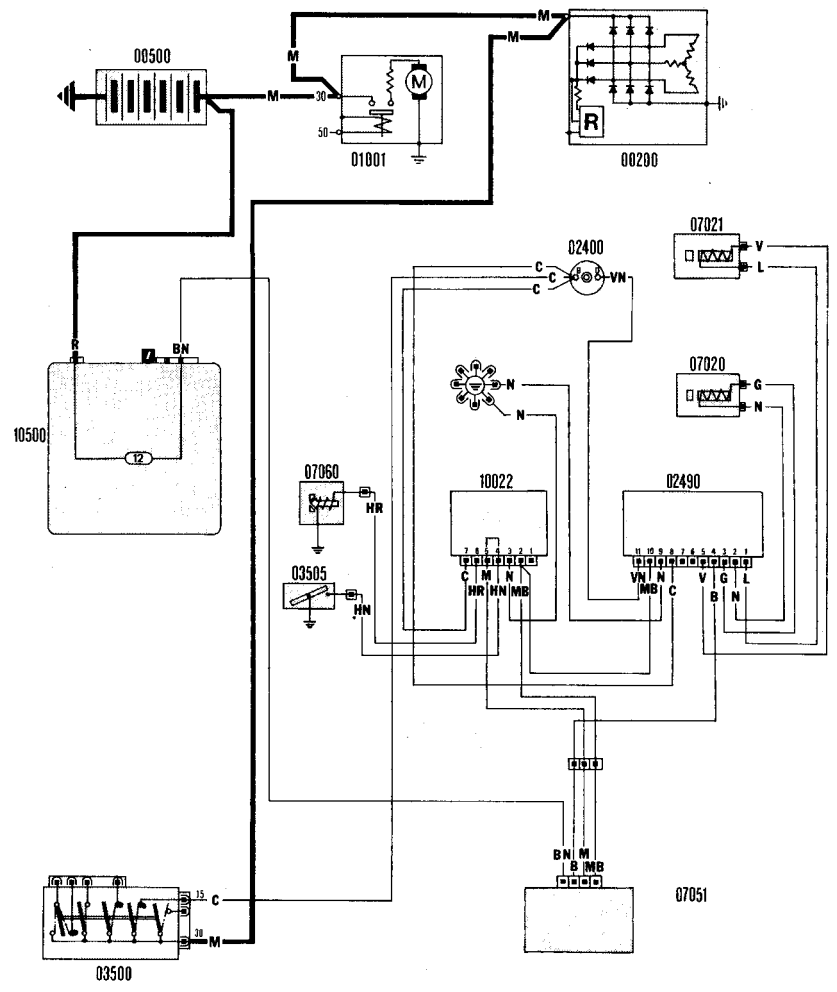


Wiring diagram 6 - electronic ignition, fuel cut-off device and economy gauge (ES models)

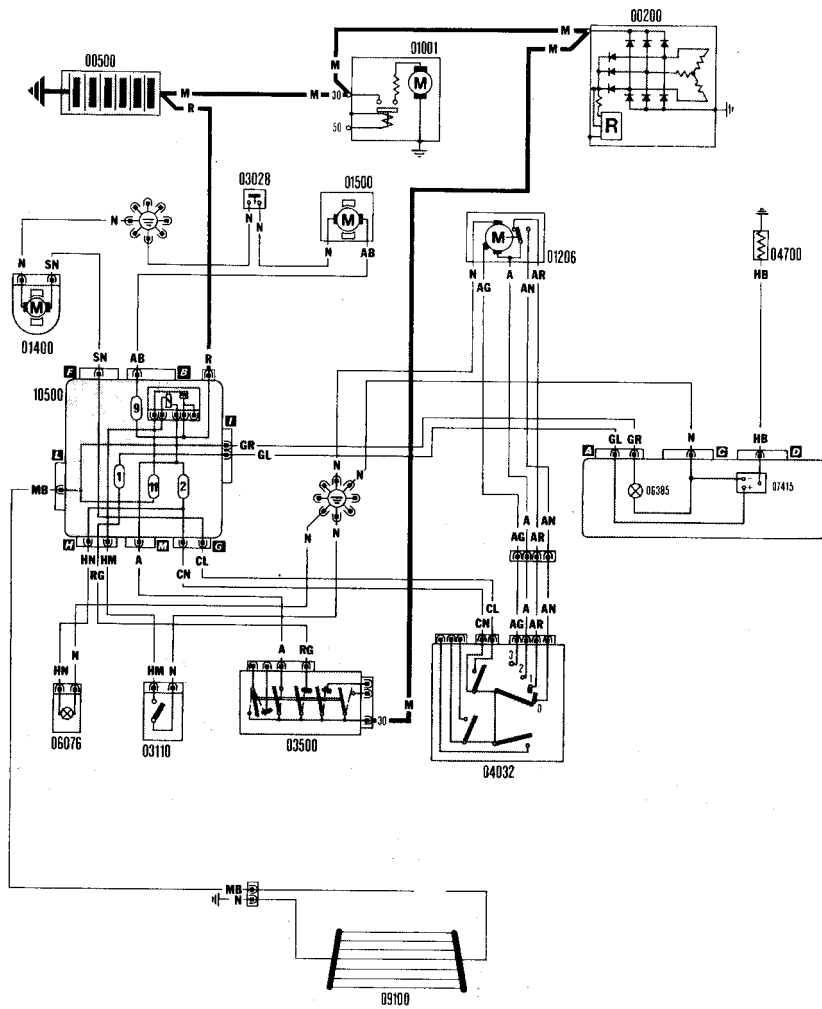


Wiring diagram 9 - windscreen wash/wipe, radiator fan, coolant temperature sensor, heated rear screen and instrument panel illumination

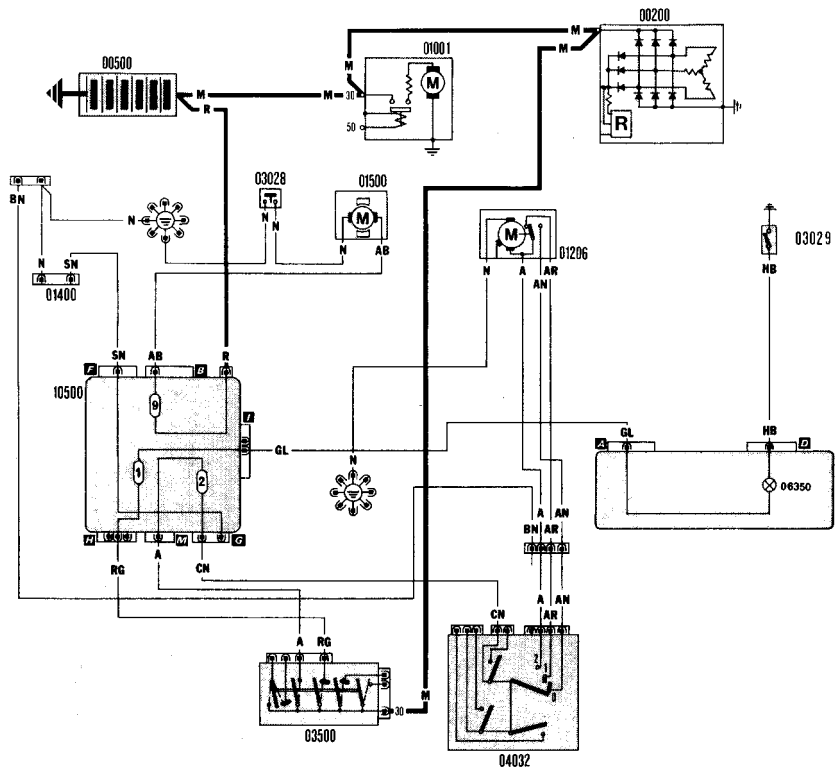


Wiring diagram 10 - windscreen wash/wipe, radiator fan and coolant temperature sensor (Comfort and ES models)

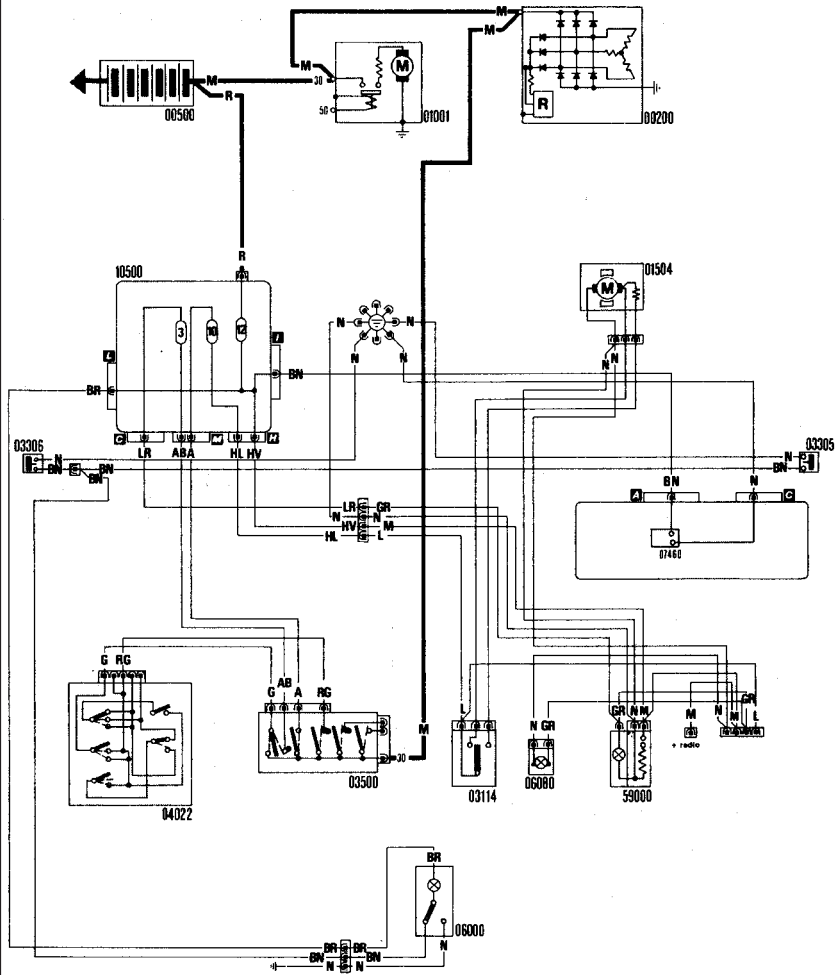


Wiring diagram 11 - courtesy lamps, heater fan, heater illumination, cigar lighter, digital clock and radio (S and SX models)

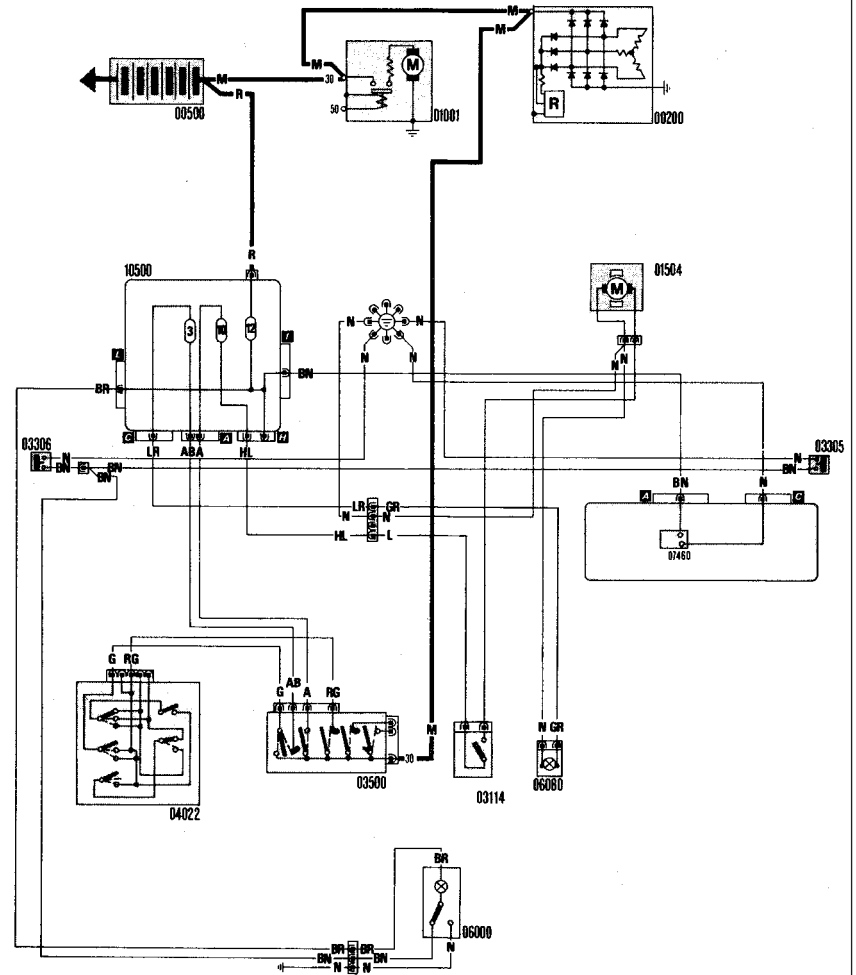


Wiring diagram 12 - courtesy lamps, heater fan and heater illumination (Comfort and ES models)

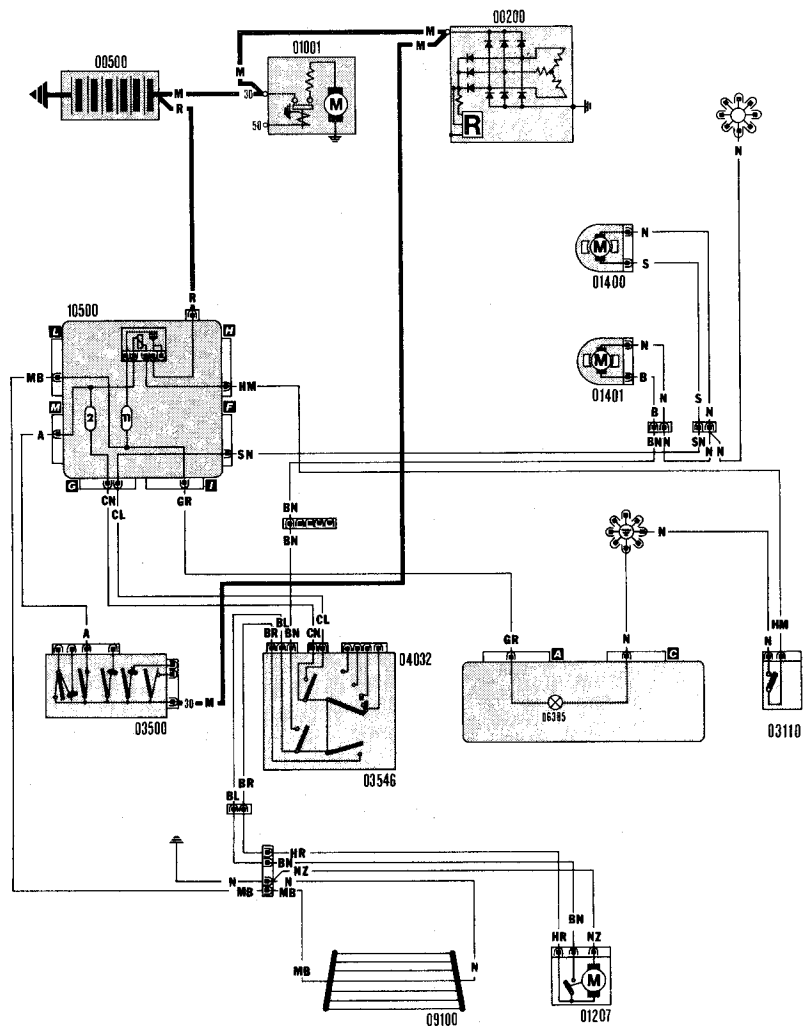


Wiring diagram 13 - heated rear screen and rear wash/wipe (S and SX models)

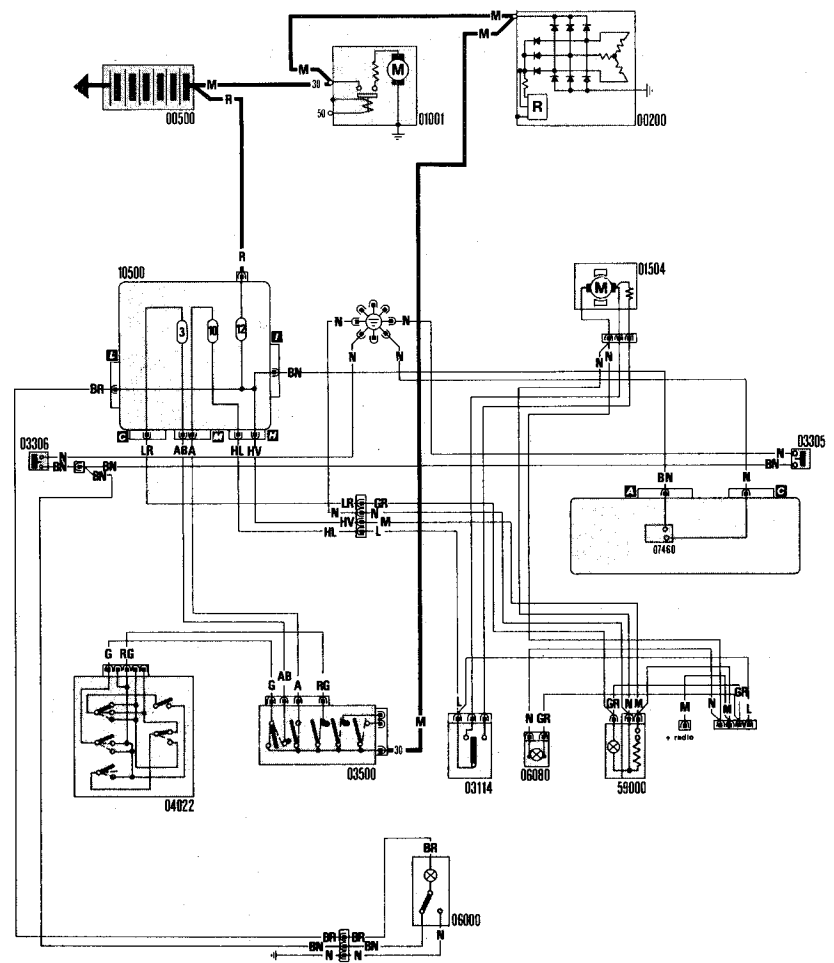


Wiring diagram 14 - tachometer, digital clock, map reading lamp and vacuum gauge (Comfort, ES, S and SX models)

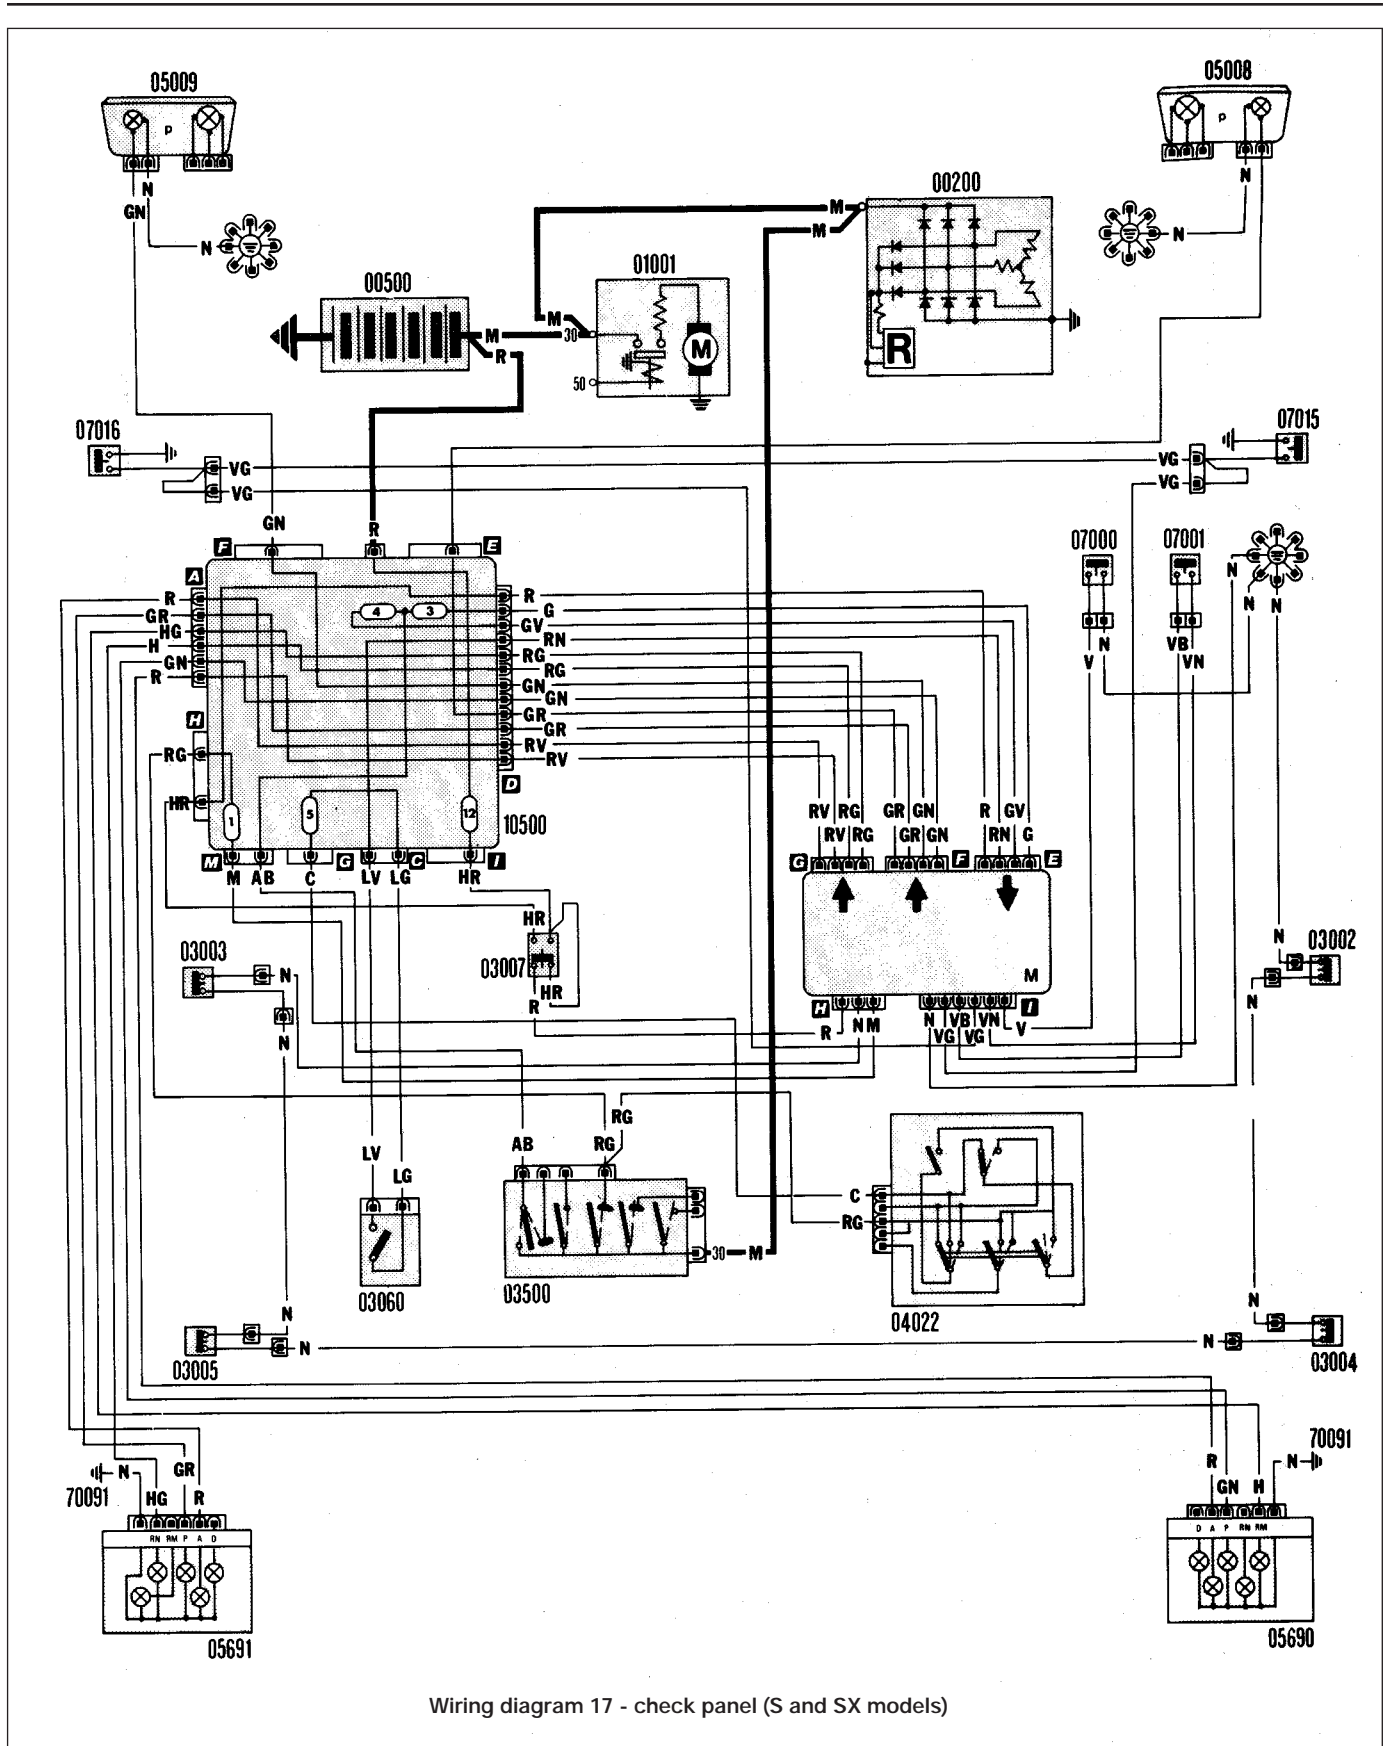


Wiring diagram 17 - check panel (S and SX models)

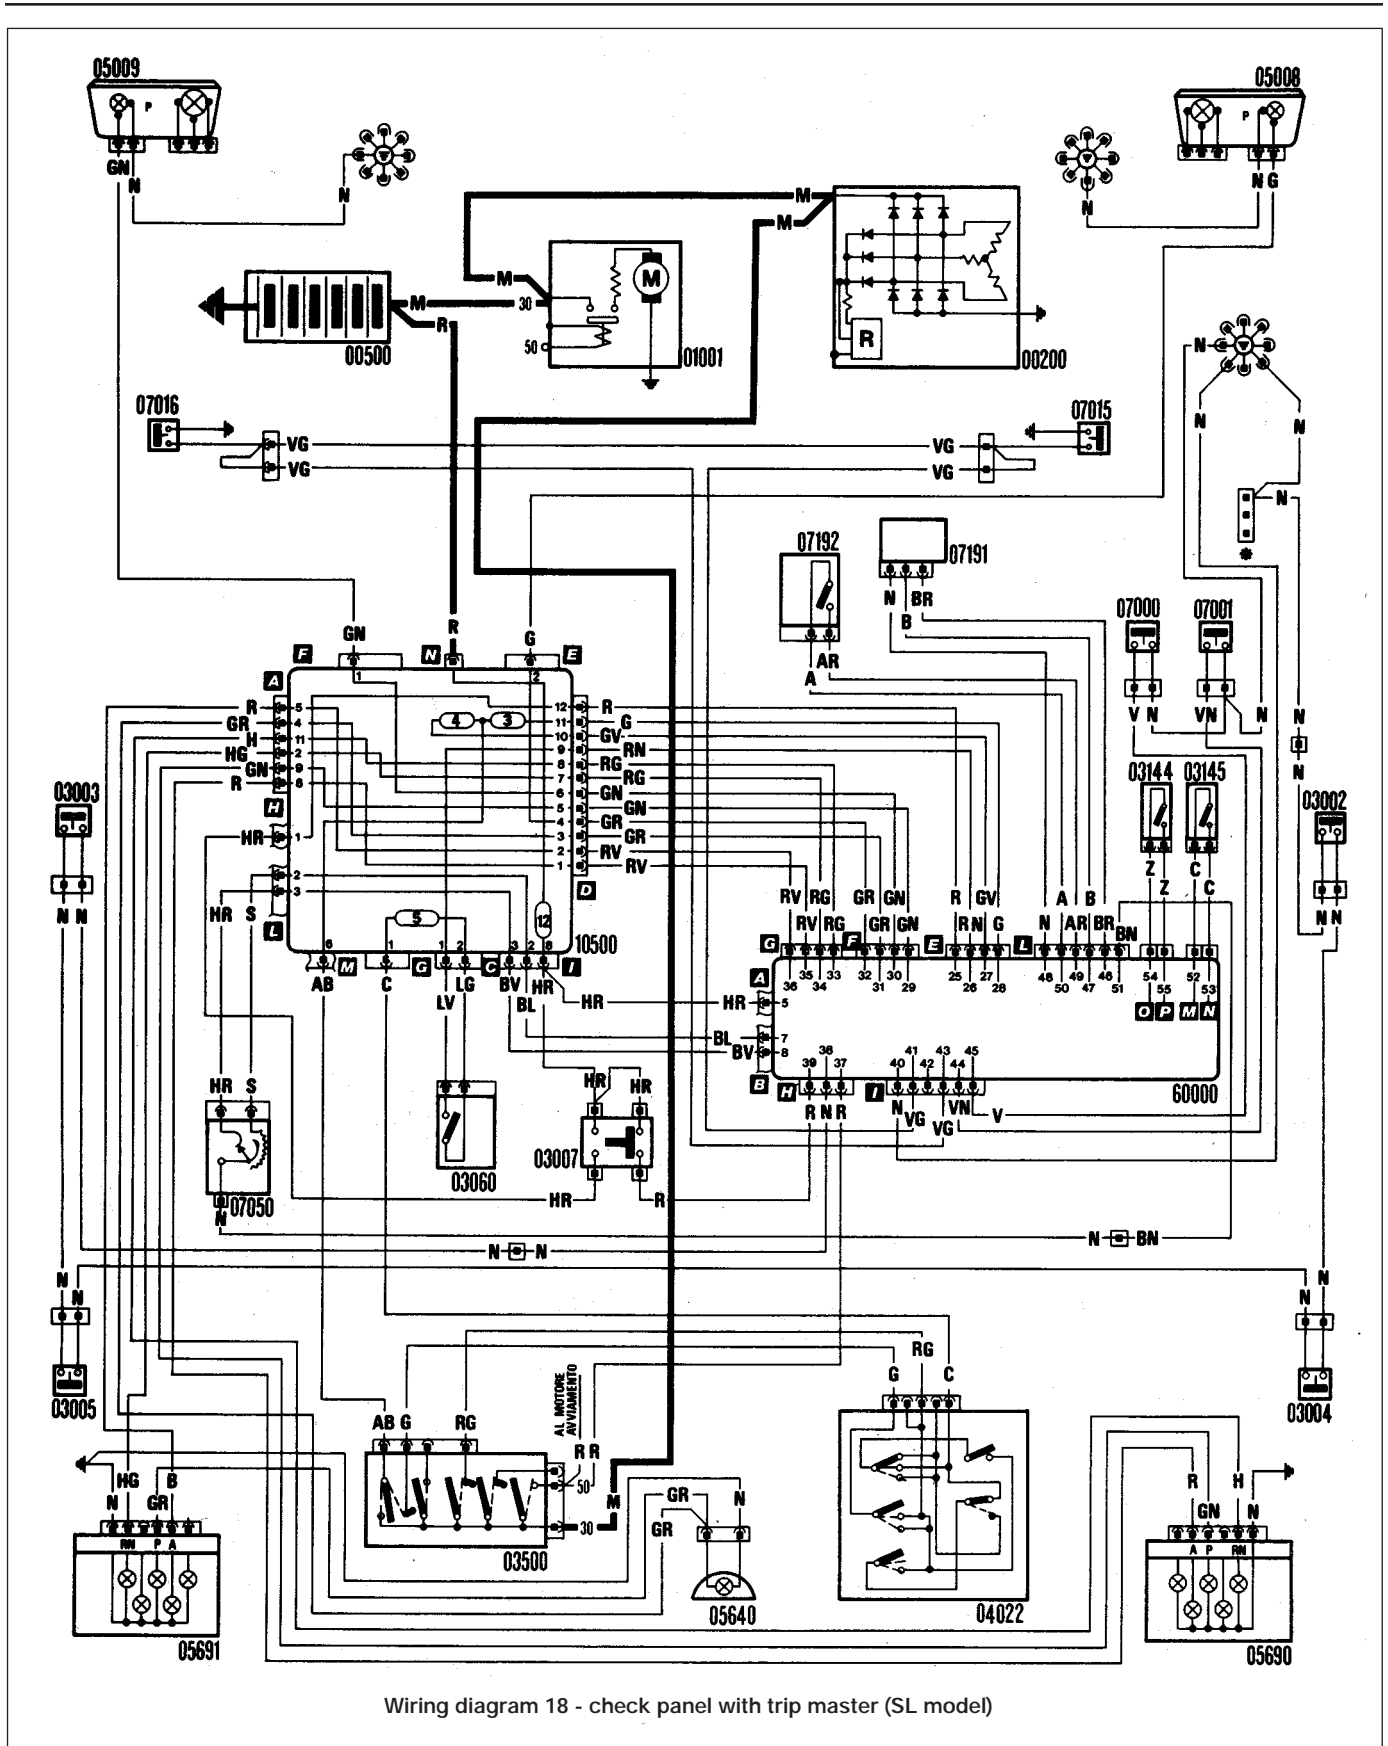


Wiring diagram 18 - check panel with trip master (SL model)

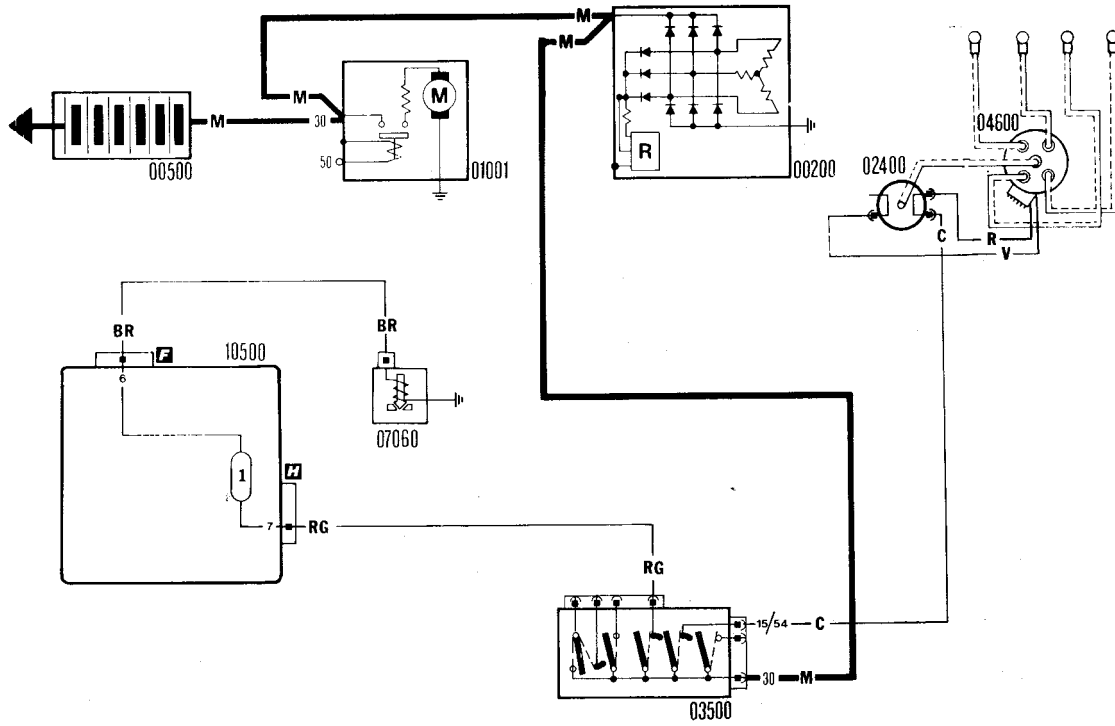


Wiring diagram 19 - ignition and idle cut-out (later 45 models)

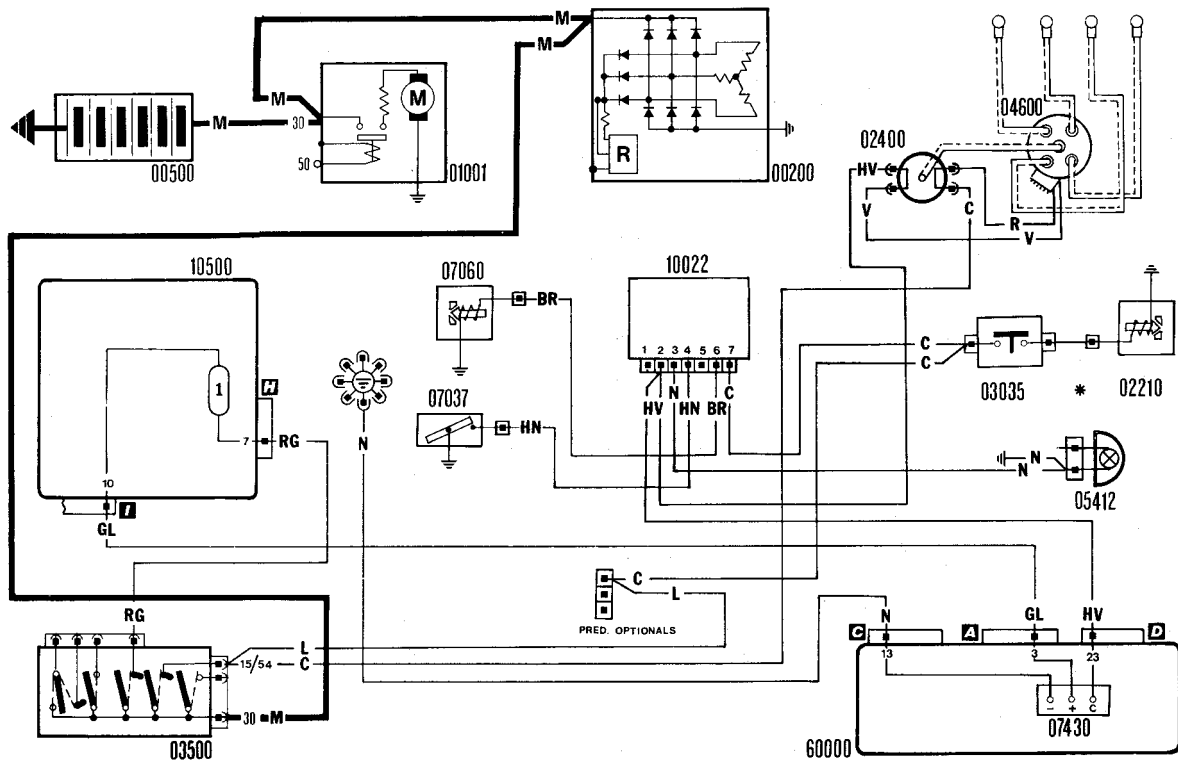


Wiring diagram 20 - ignition cut-off device, tachometer and accelerator pump cut-out (60 and 70 models)

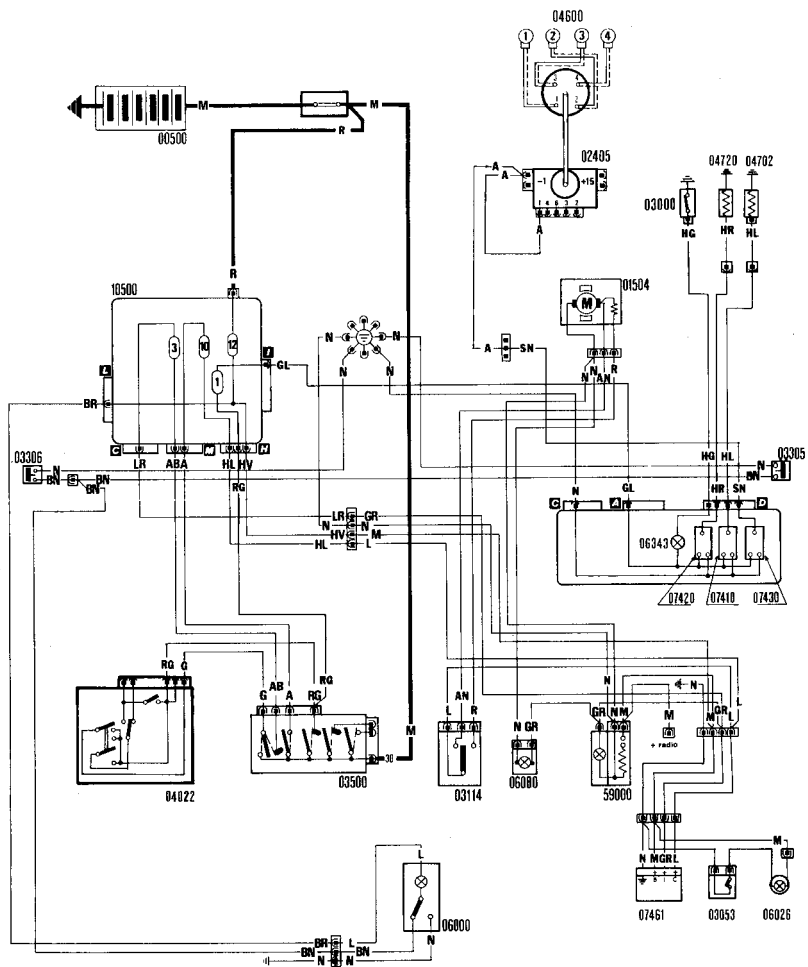


Wiring diagram 22 - direction indicators, hazard warning lamps, brake stop-lamps, horn and low brake fluid sensor (1301 cc Turbo ie model)

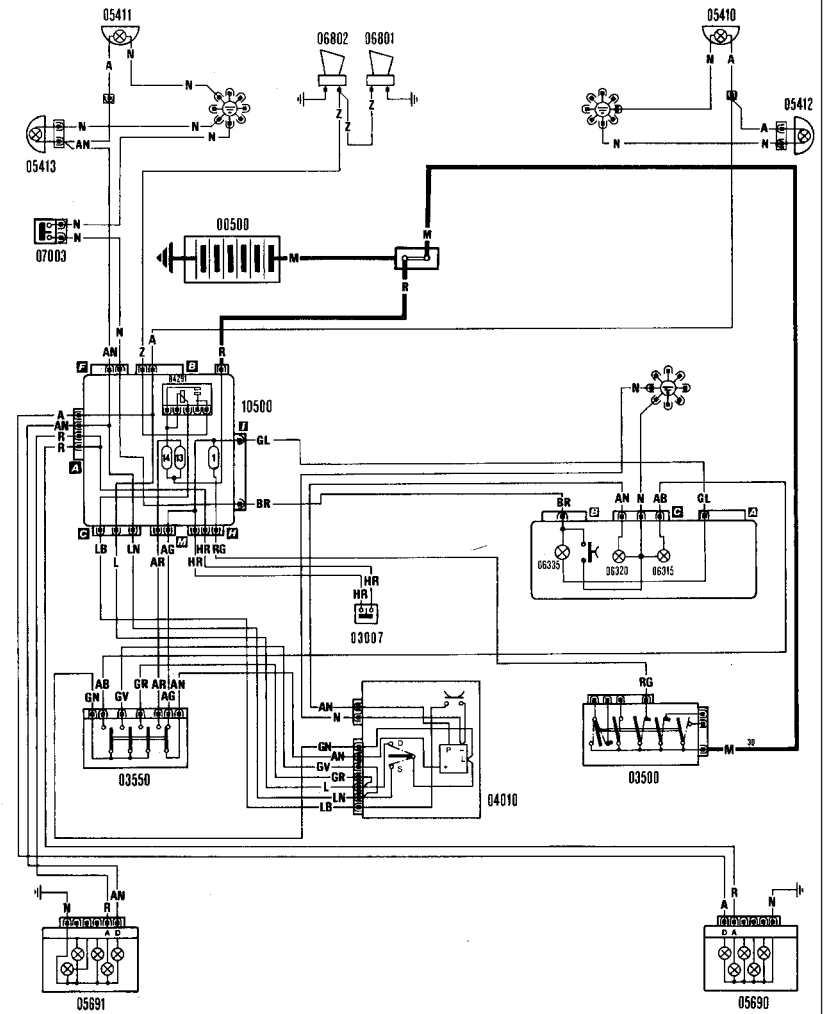


Wiring diagram 23 - courtesy lamps, heater fan, heater illumination, cigar lighter, digital clock, radio, low oil pressure lamp, oil pressure switch, oil temperature gauge and tachometer (1301 cc Turbo ie model)

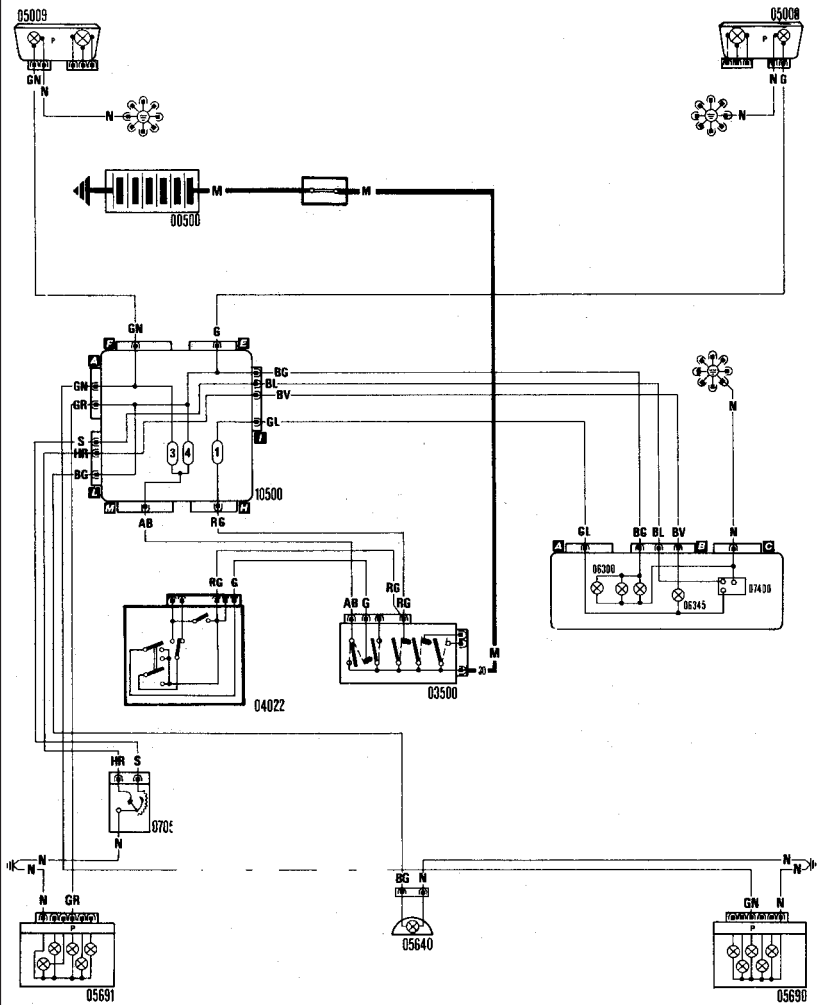


Wiring diagram 24 - dipped headlamps, headlamp main beam, foglamps (front and rear) and reversing lamps (1301 cc Turbo ie model)

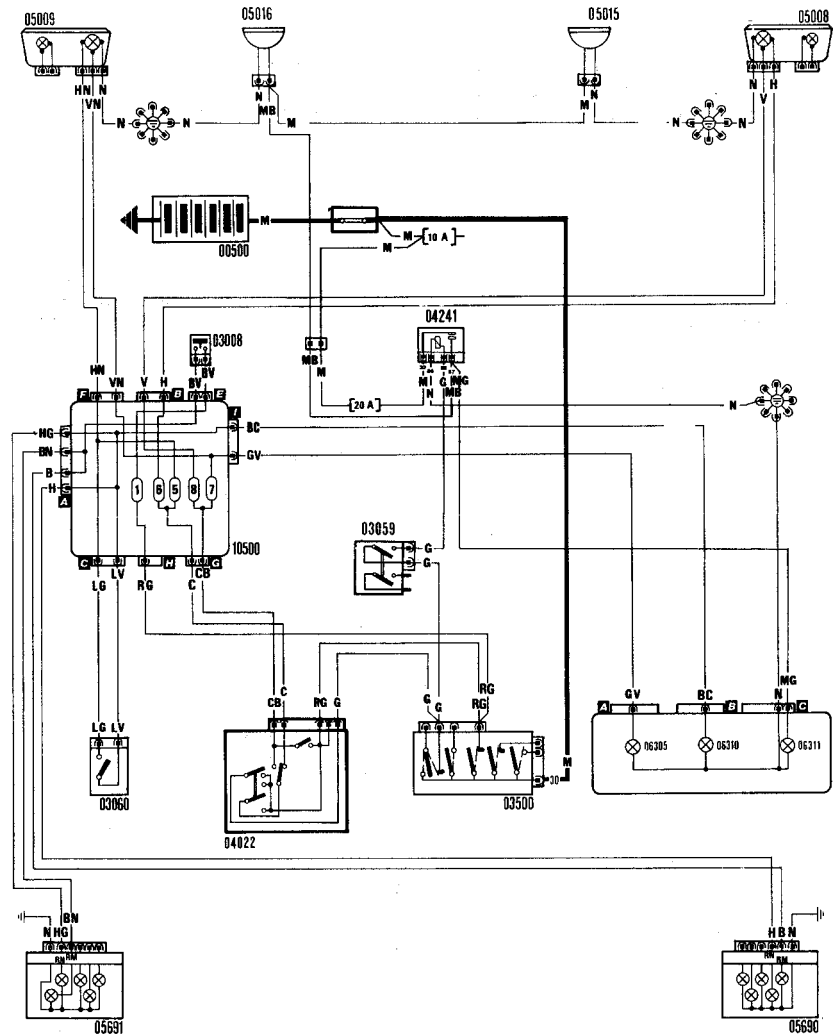

Wiring diagram 25 - front parking lamps, rear number plate lamp, fuel gauge and low level warning lamp, and instrument panel illumination (1301 cc Turbo ie model)

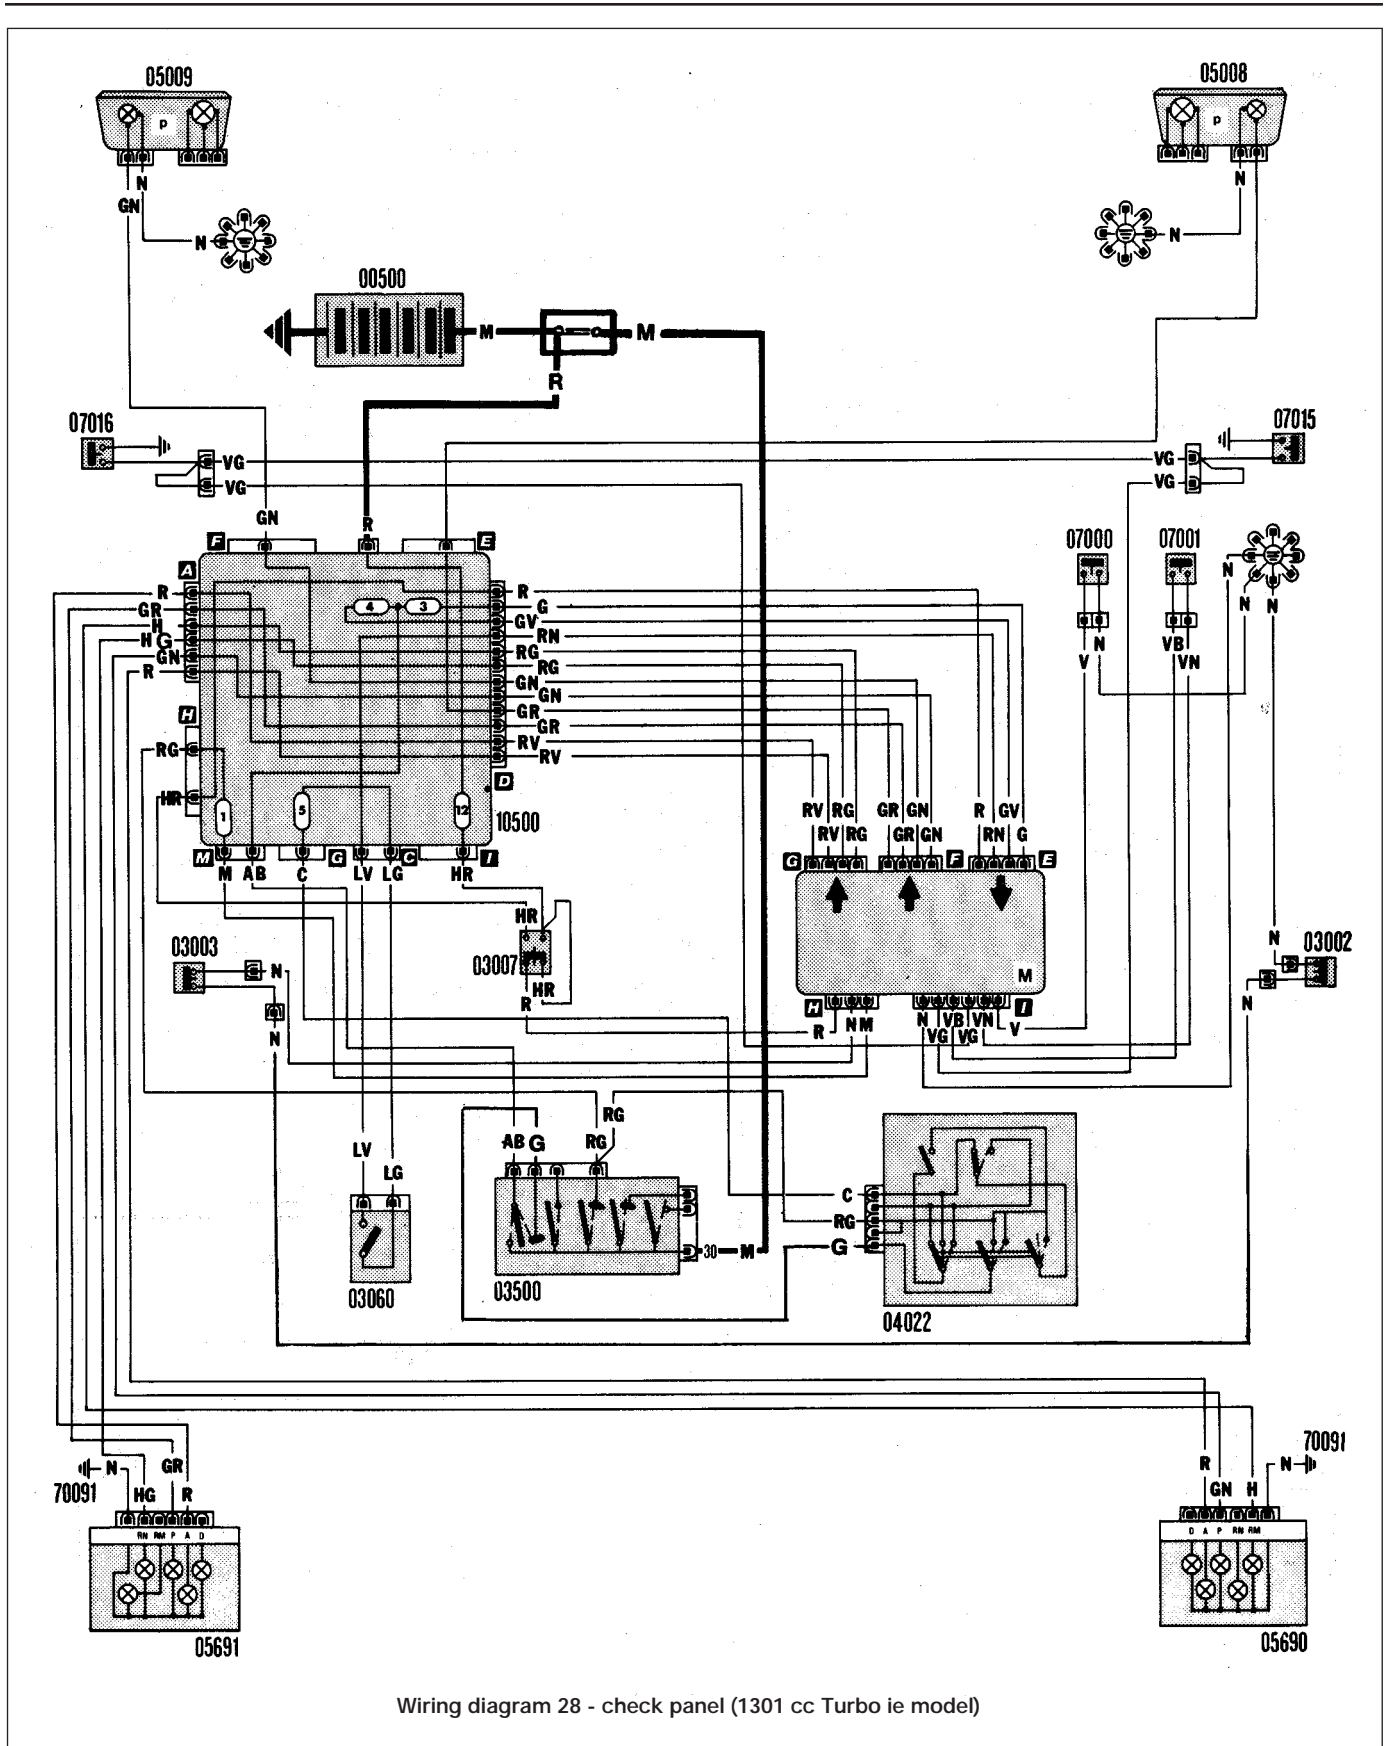


Wiring diagram 28 - check panel (1301 cc Turbo ie model)

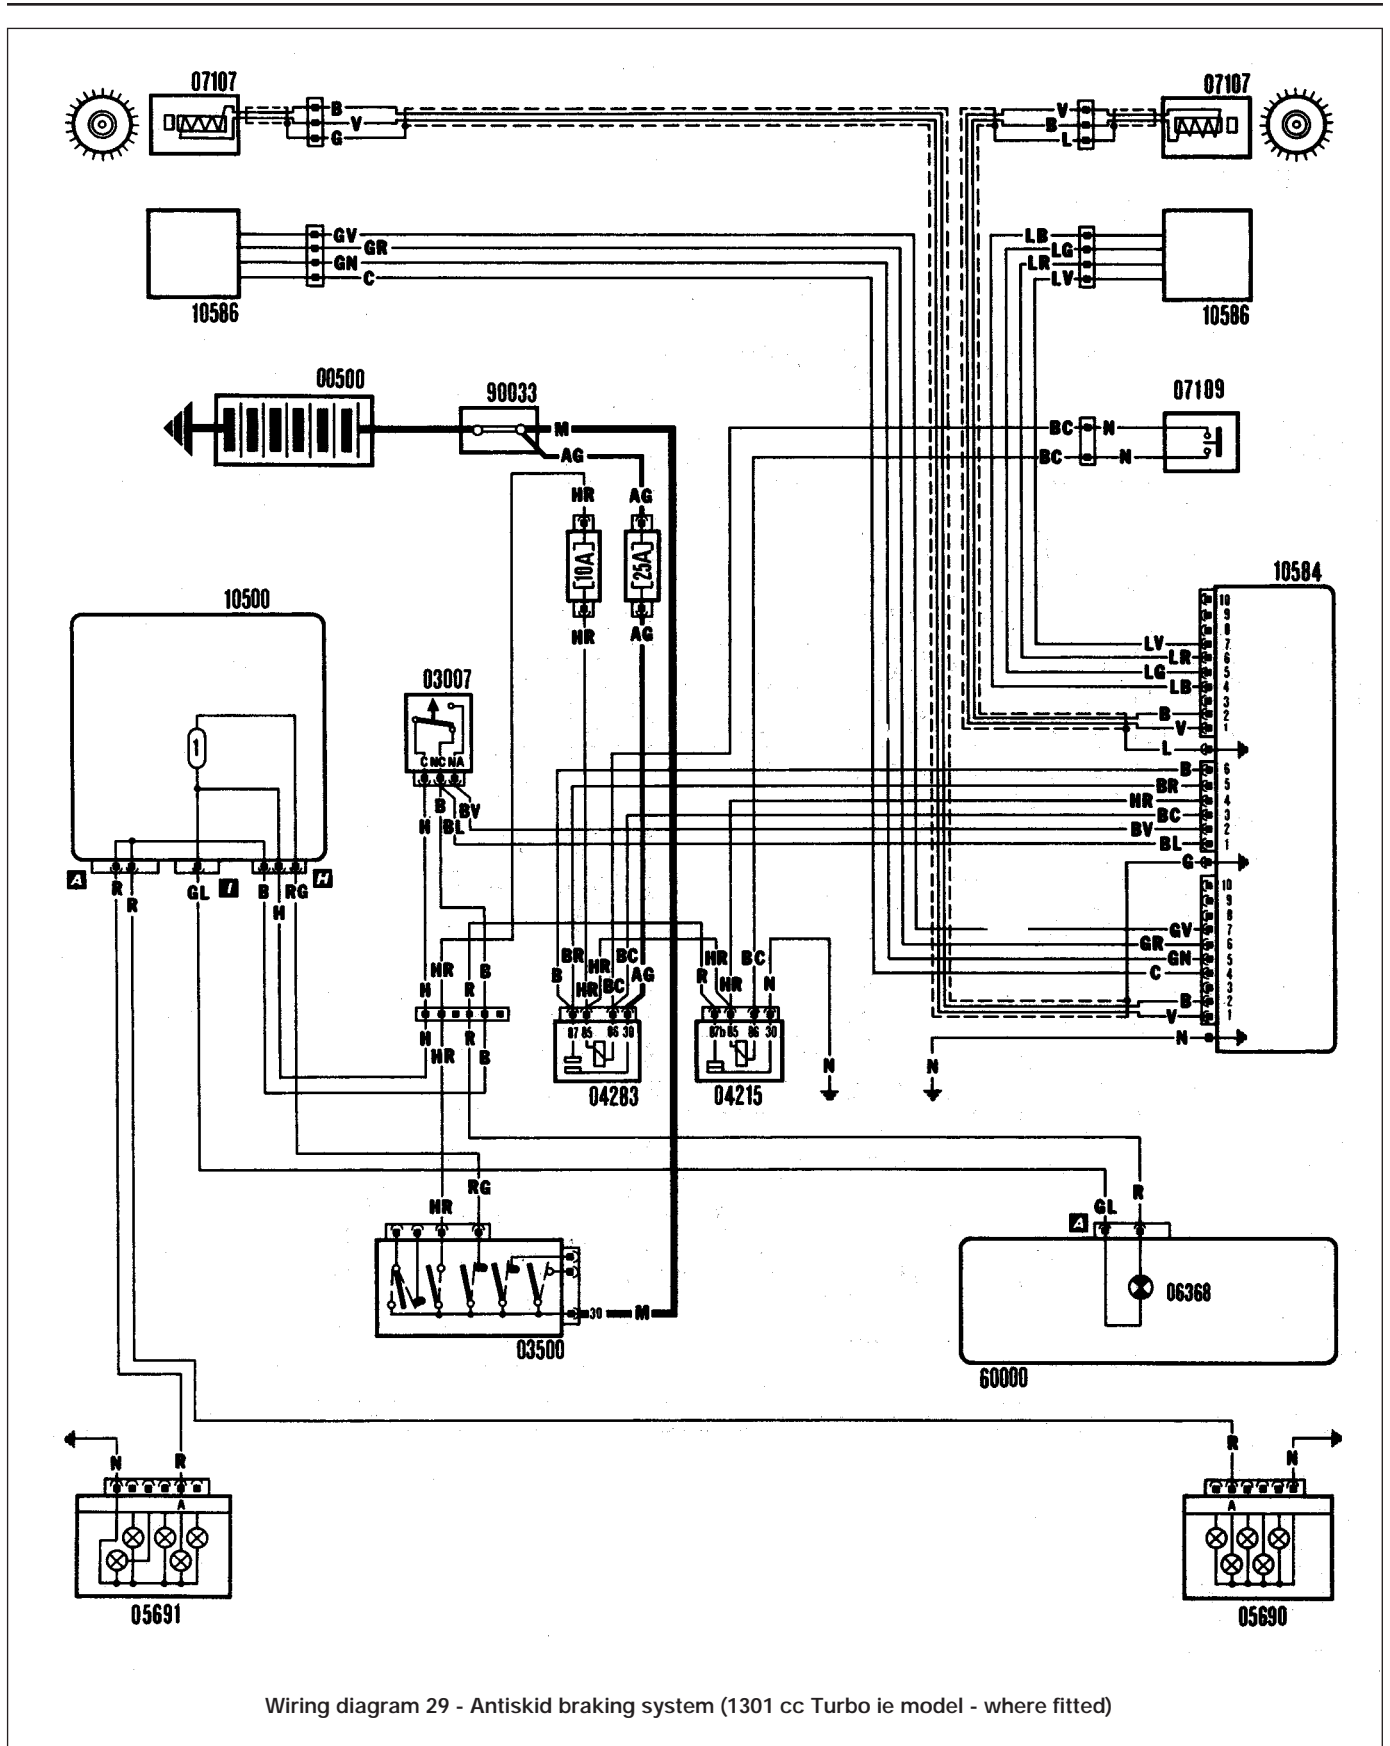


Component key for wiring diagrams 30 to 52

Note: Not all the items listed will be fitted to all models


No	Description	No	Description	No	Description
1	Injector cooling fan	47	Windscreen wiper motor	F	Rear foglamps/headlamp washer intermittent device switch
2	Left front light cluster	48	Headlamp washer pump	G	Headlamp dip switch
3	Left foglamp	49	Fuel injector	H	External lights switch
4	Left front engine compartment earth	50	Fuel injector	I	Flasher switch
5	Radiator cooling fan	51	Fuel injector	92	Foglamp relay
6	Double contact thermostatic switch on engine radiator	52	Fuel injector	93	Electric fuel pump relay
6A	Thermostatic switch on engine radiator	53	Supplementary air valve	94	Electric windows relay feed
7	Left horn	54	Spark plug	95	Headlamp wash/wipe intermittent device
8	Right horn	55	Spark plug	96	Direction indicators/hazard warning lights flasher unit
9	Resistor for engaging radiator fan 1st speed	56	Spark plug	97	Central locking receiver
10	Right front light cluster	57	Spark plug	98	Central locking control unit
11	Right foglamp	58	Excess supercharging pressure switch	99	Join with brake pad cables
12	Right front engine compartment earth	59	Throttle position switch	100	Join between engine cable and dashboard cables
13	Battery	60	Engine speed sensor	101	Automatic heater cable join
14	Ignition coil	61	Ignition diagnostic socket	102	Instrument panel
15	Ignition distributor with magnetic impulse generator	62	Connector block	A	Foglamps warning light
16	Left front side direction indicator	63	Connector block	B	Main beam headlamps warning light
17	Ignition power module	64	Alternator	C	Side lights warning light
18	MPi electronic injection control unit	65	Thermostatic switch for injector cooling fan	D	Rear foglamps warning light
19	Join between injection/ignition cables in engine compartment	66	Right brake pad wear sensor	E	Heated rear screen warning light
20	Battery cables join in engine compartment	67	TDC sensor	F	Hazard warning lights warning light
21	Antiskid braking system wiring join	68	Connector block	G	Direction indicators warning light
22	Starting go-ahead relay	69	Connector block	H	Handbrake applied and insufficient brake fluid level warning light
23	Earth for battery	70	Connector block	I	Choke warning light
24	Radiator coolant temperature sender unit for electronic injection	71	Connector block	K	Instrument panel light bulbs
25	Anti-knock sensor	72	Join with right brake pad cables	L	Battery recharging warning light
26	Injection system diagnostic socket	73	Electronic earth	M	Insufficient engine oil pressure warning light
27	Switch signalling insufficient engine oil pressure	74	Power earth	O	Antiskid braking system failure warning light
28	Radiator coolant temperature sender unit	75	Brake stop-lamp switch	P	Maximum turbocharging pressure warning light
29	Engine oil temperature sender unit	76	20 A fuse for central locking	Q	Brake pad wear warning light
30	Engine oil pressure sender unit	77	10 A fuse for electric fuel pump	R	Door ajar warning light
31	Right front side direction indicator	78	30 A fuse for radiator cooling fan	U	Fuel level gauge
32	Engine oil temperature sender unit cable join	79	30 A fuse for electric windows	V	Engine oil pressure gauge
33	Battery recharging signal cable join	80	10 A fuse for injector cooling fan	W	Engine oil temperature gauge
34	Windscreen washer pump	81	20 A fuse for headlamp wash/wipe	Y	Tachometer
35	Rear screen washer pump	82	20 A fuse for foglamps	Z	Coolant temperature gauge
36	Reversing switch	83	20 A fuse for foglamps	103	Join with remote control central locking cables
37	Fuel injectors relay feed	84	Junction box with fuses and relays: E1 Horn relay (for single tone horns bridge between 86 and 87) E2 Heated rear screen relay E3 Heater (bridge between 85 and 30)	104	Cigar lighter
38	Insufficient brake fluid level sensor	85	Join between front cable and door ajar sensor cables	105	Radio receiver
39	Left brake pad wear sensor	86	Earth on dashboard, left hand side	106	Heater unit
40	Microplex electronic ignition control unit	87	Earth on dashboard, right hand side	107	Switch unit
41	Injection cables join in engine compartment	88	Choke warning light switch	A	Heated rear screen switch
42	Ignition cables join in engine compartment	89	Ignition switch	B	Rear foglamps switch
43	Join between battery cable and injection cables	90	Hazard warning lights switch	C	Switch unit light bulb
44	Join between engine cable and battery cables	91	Steering column switch unit	D	Rear screen wiper switch
45	Left front brake pad cables join	A	Rear screen wash/wipe switch	E	Foglamps switch
46	Starter motor	B	Horn button	F	Clock
		C	Direction indicators switch	108	Left front electric window motor
		D	Windscreen wiper intermittent speed selector switch	109	Left front central locking geared motor
		E	Windscreen/headlamp washer control switch	110	Switch signalling left front door ajar

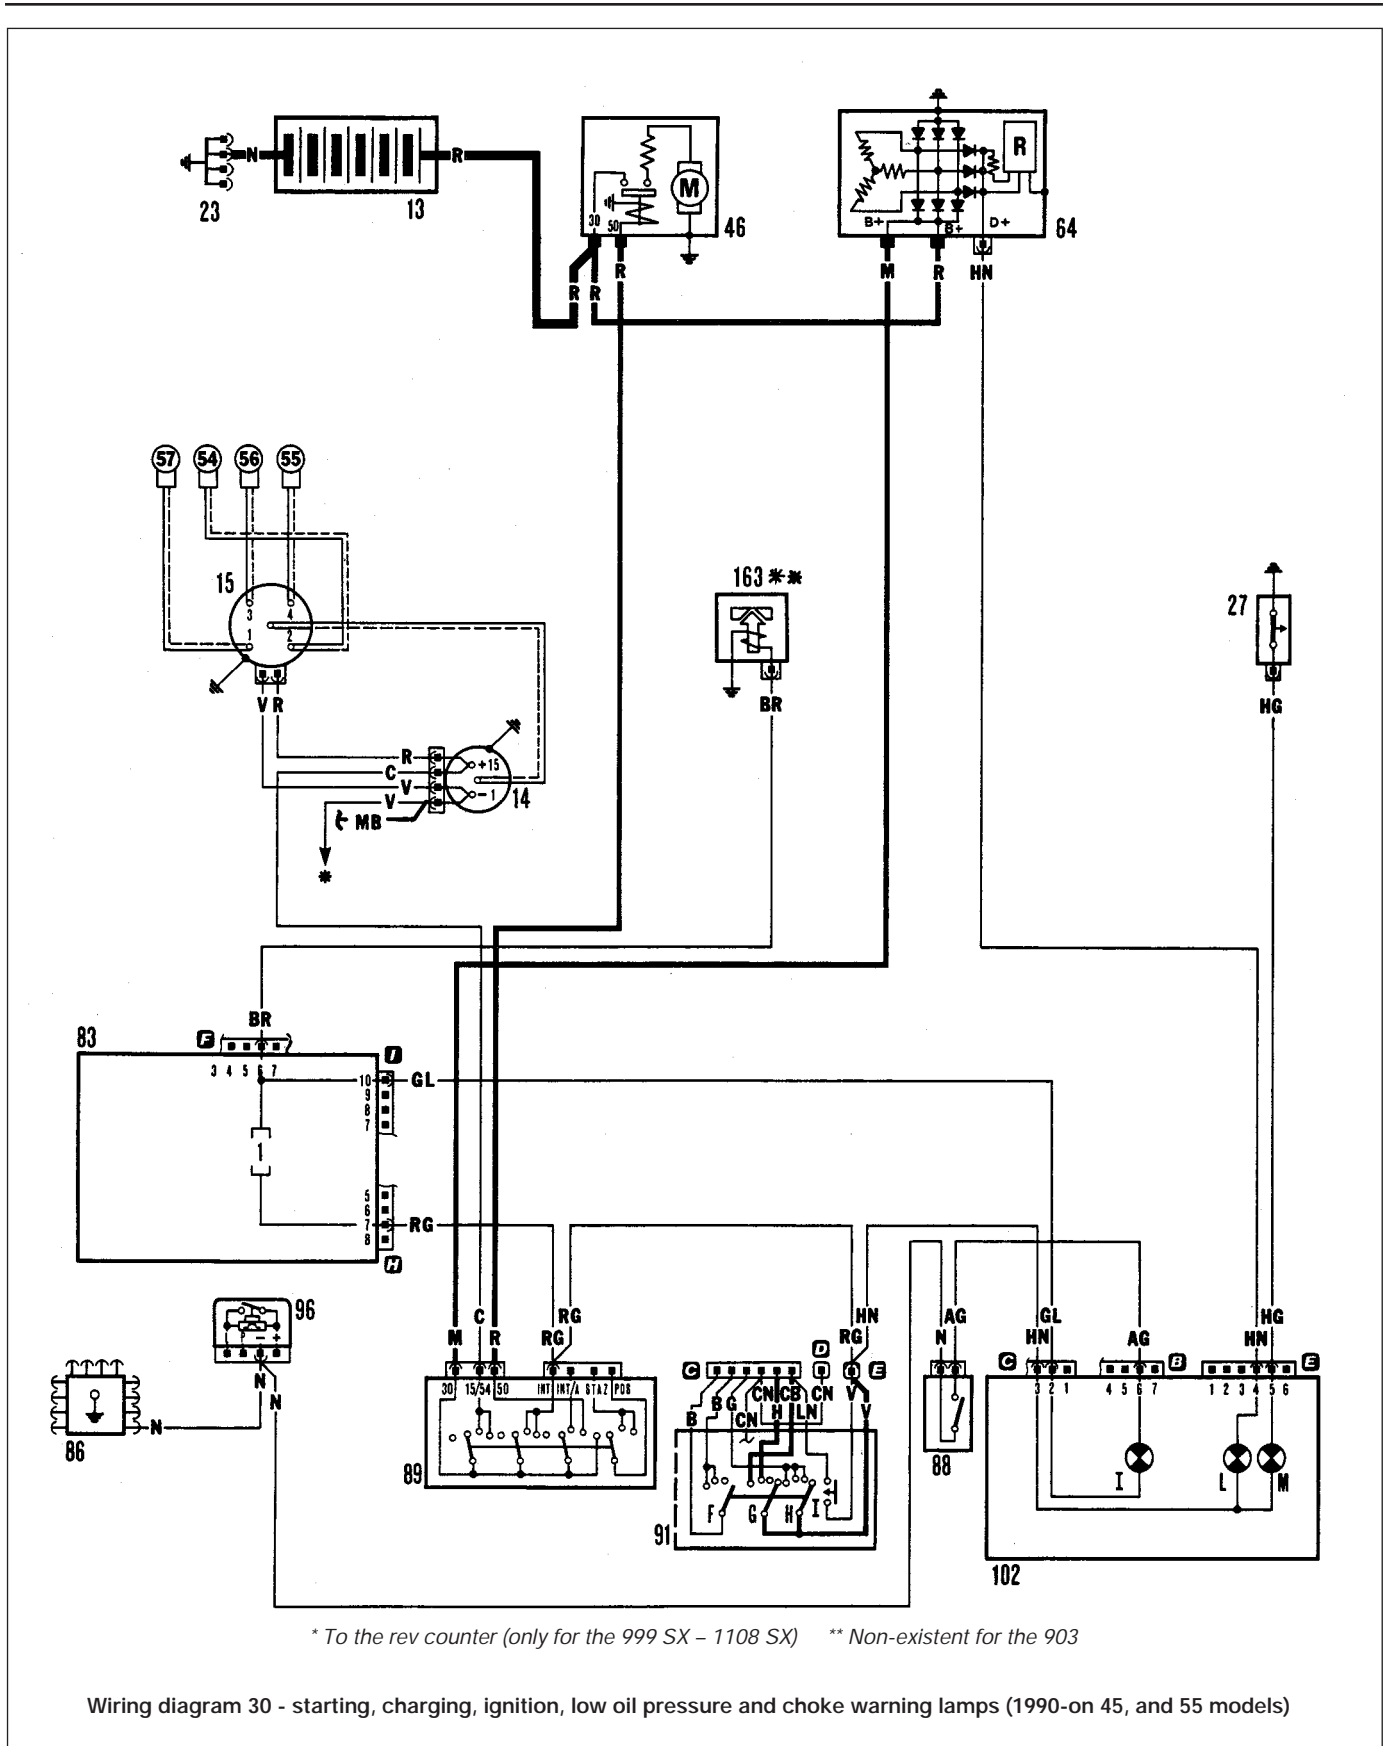

Wiring diagram 30 - starting, charging, ignition, low oil pressure and choke warning lamps (1990-on 45, and 55 models)

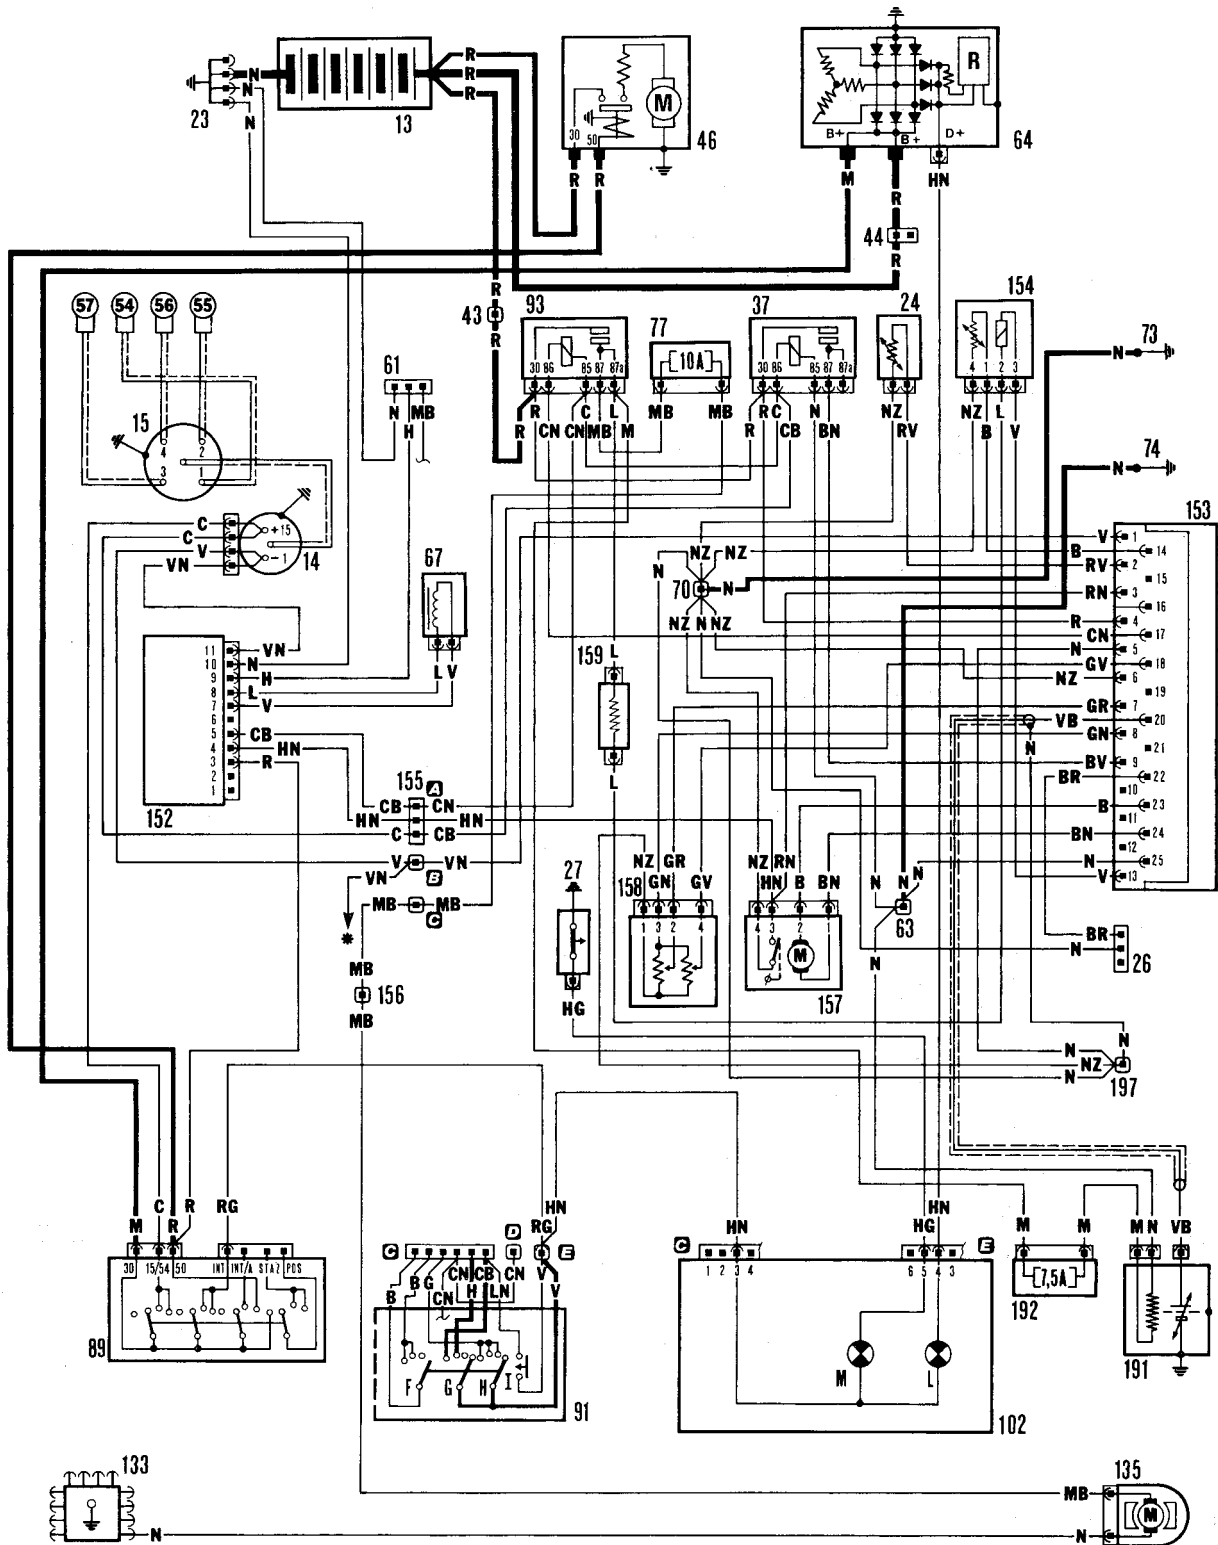


Wiring diagram 31 - starting, charging, Digiplex 2 ignition, SPi fuel injection, fuel pump and low oil pressure (1990-on 70 SX and 1.4 models)

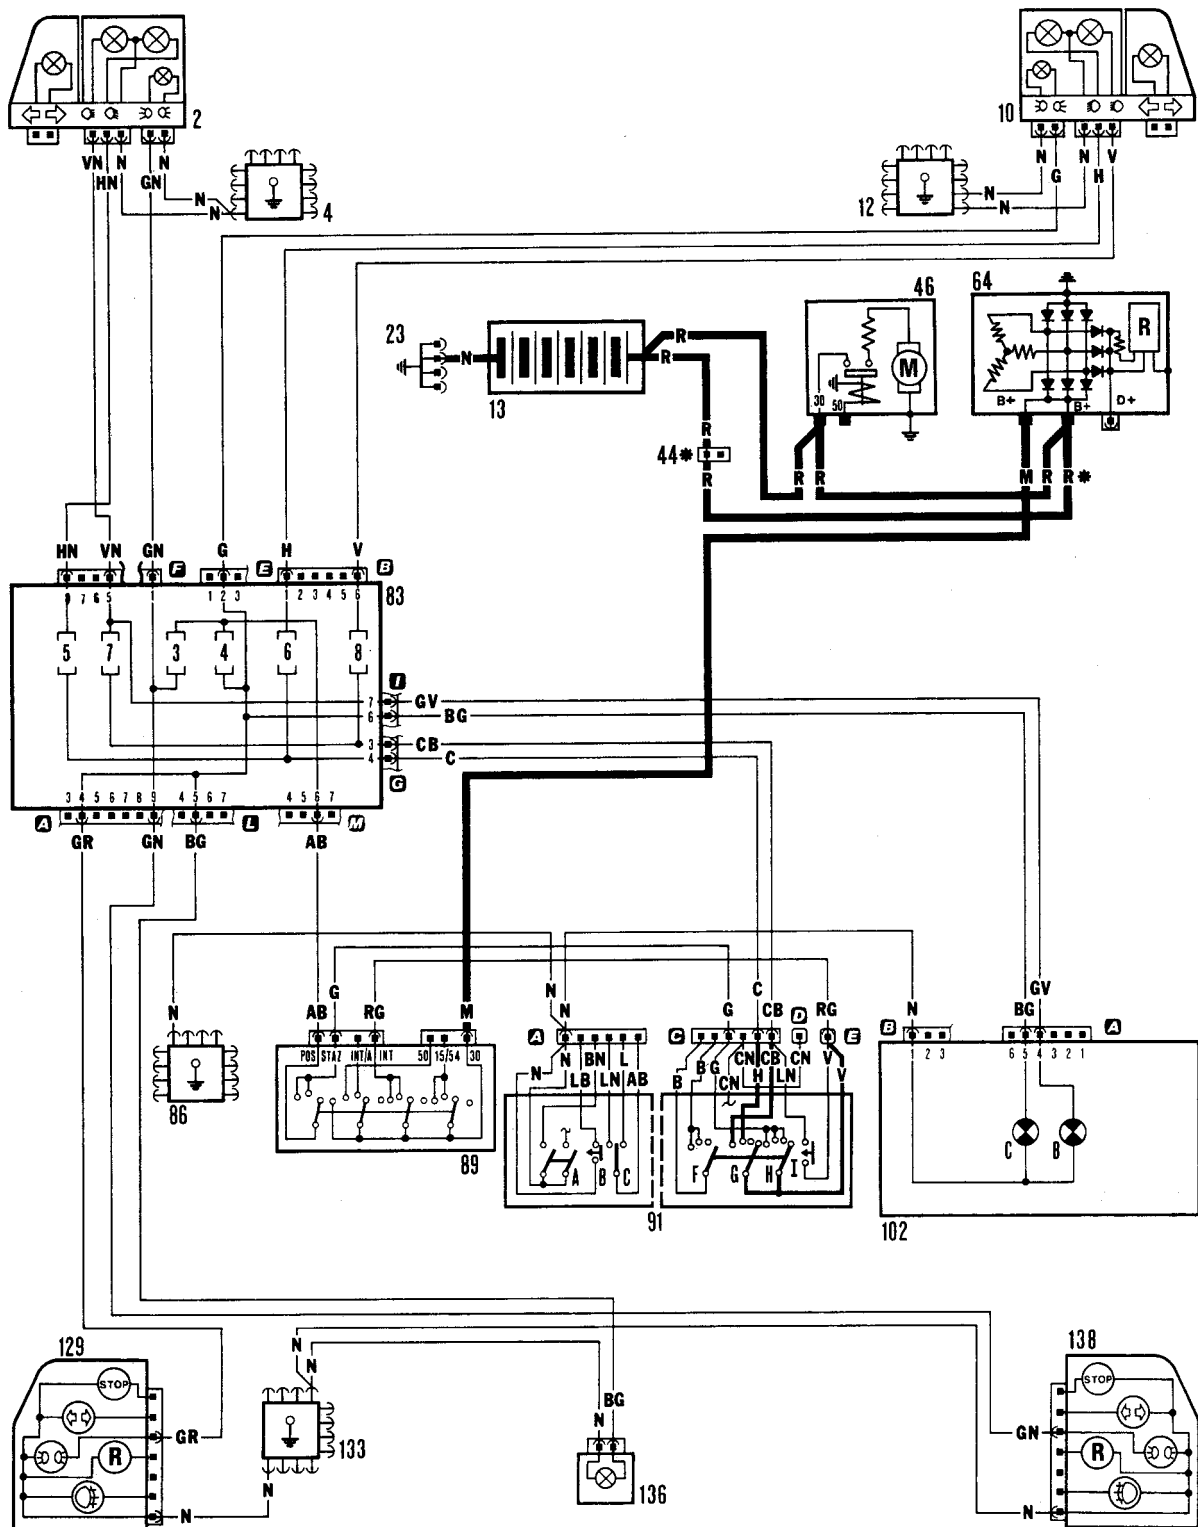


* Only for 1372 S ie - 1372 SX ie

Wiring diagram 33 - parking lamps, main/dipped headlamps, headlamp flasher and rear number plate lamp (1990-on 45, 55, 70 and 1.4 models)

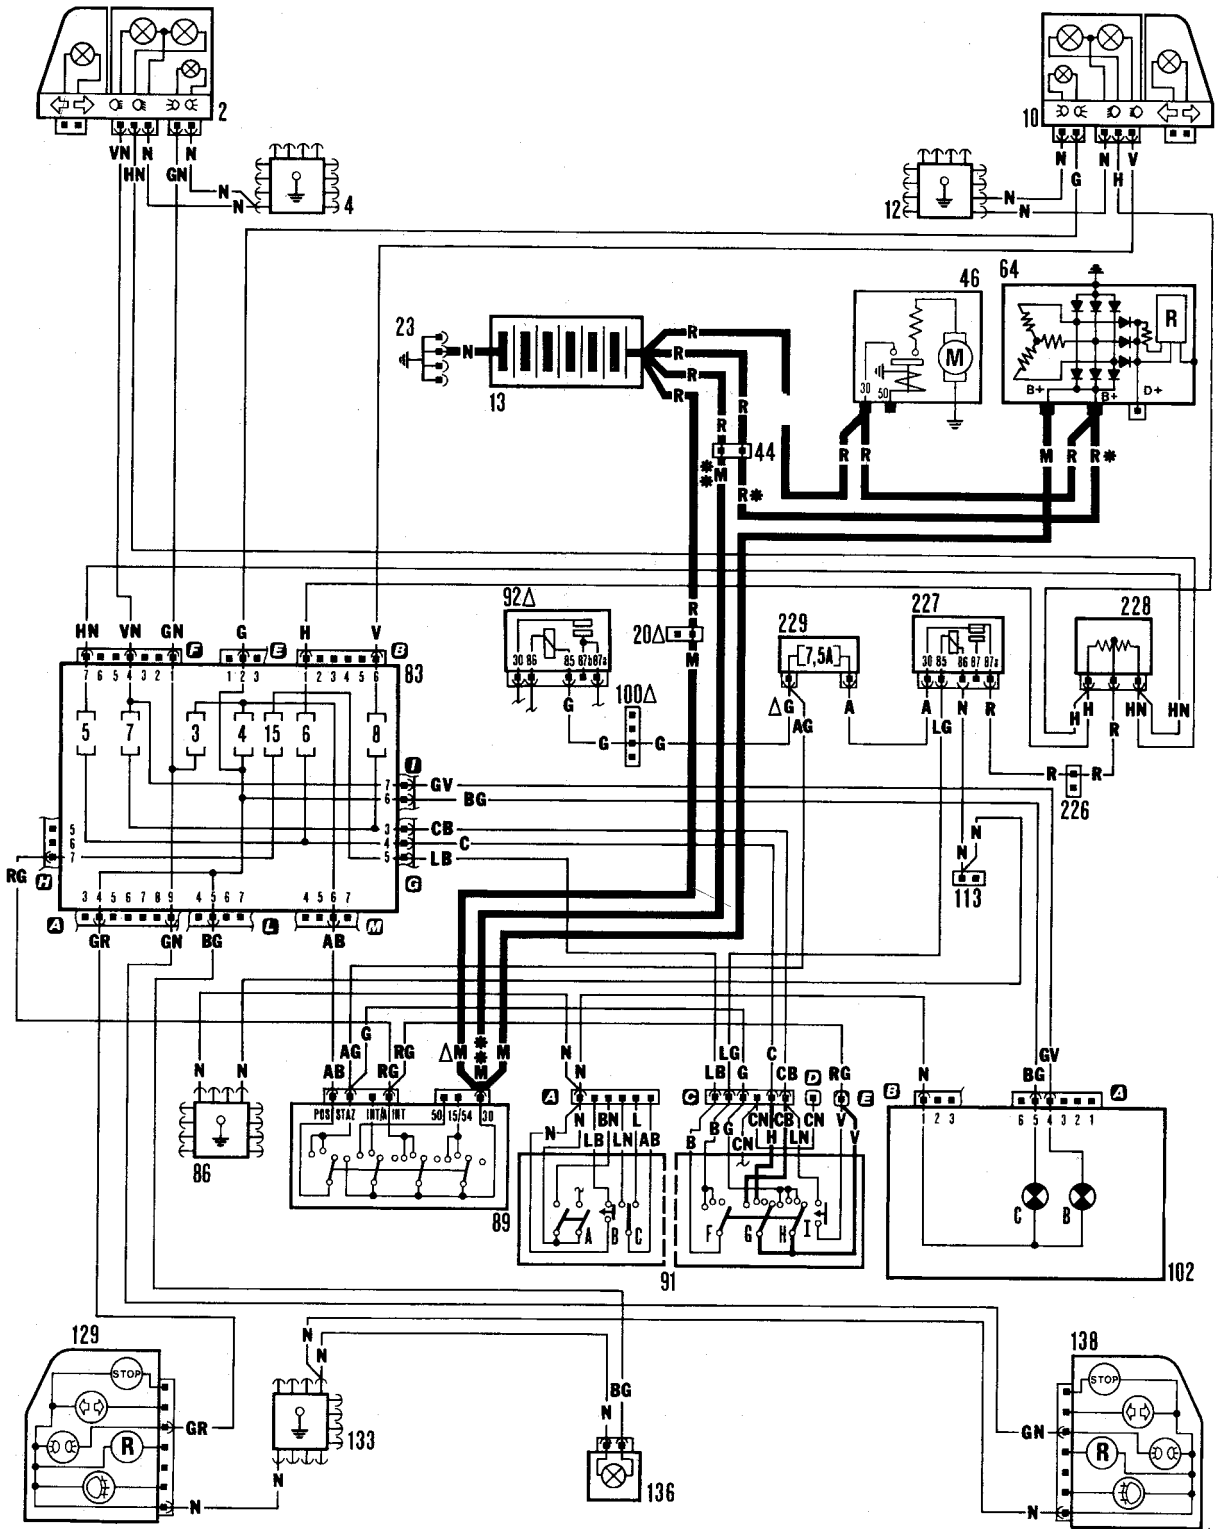


* Only for 1116 S (CTX) and 1372 (CTX) versions ** Only for 1116 S (CTX) and 1372 Turbo ie versions

Wiring diagram 34 - parking lamps, main/dipped headlamps, headlamp flasher and rear number plate lamp (1372 cc Turbo ie models)

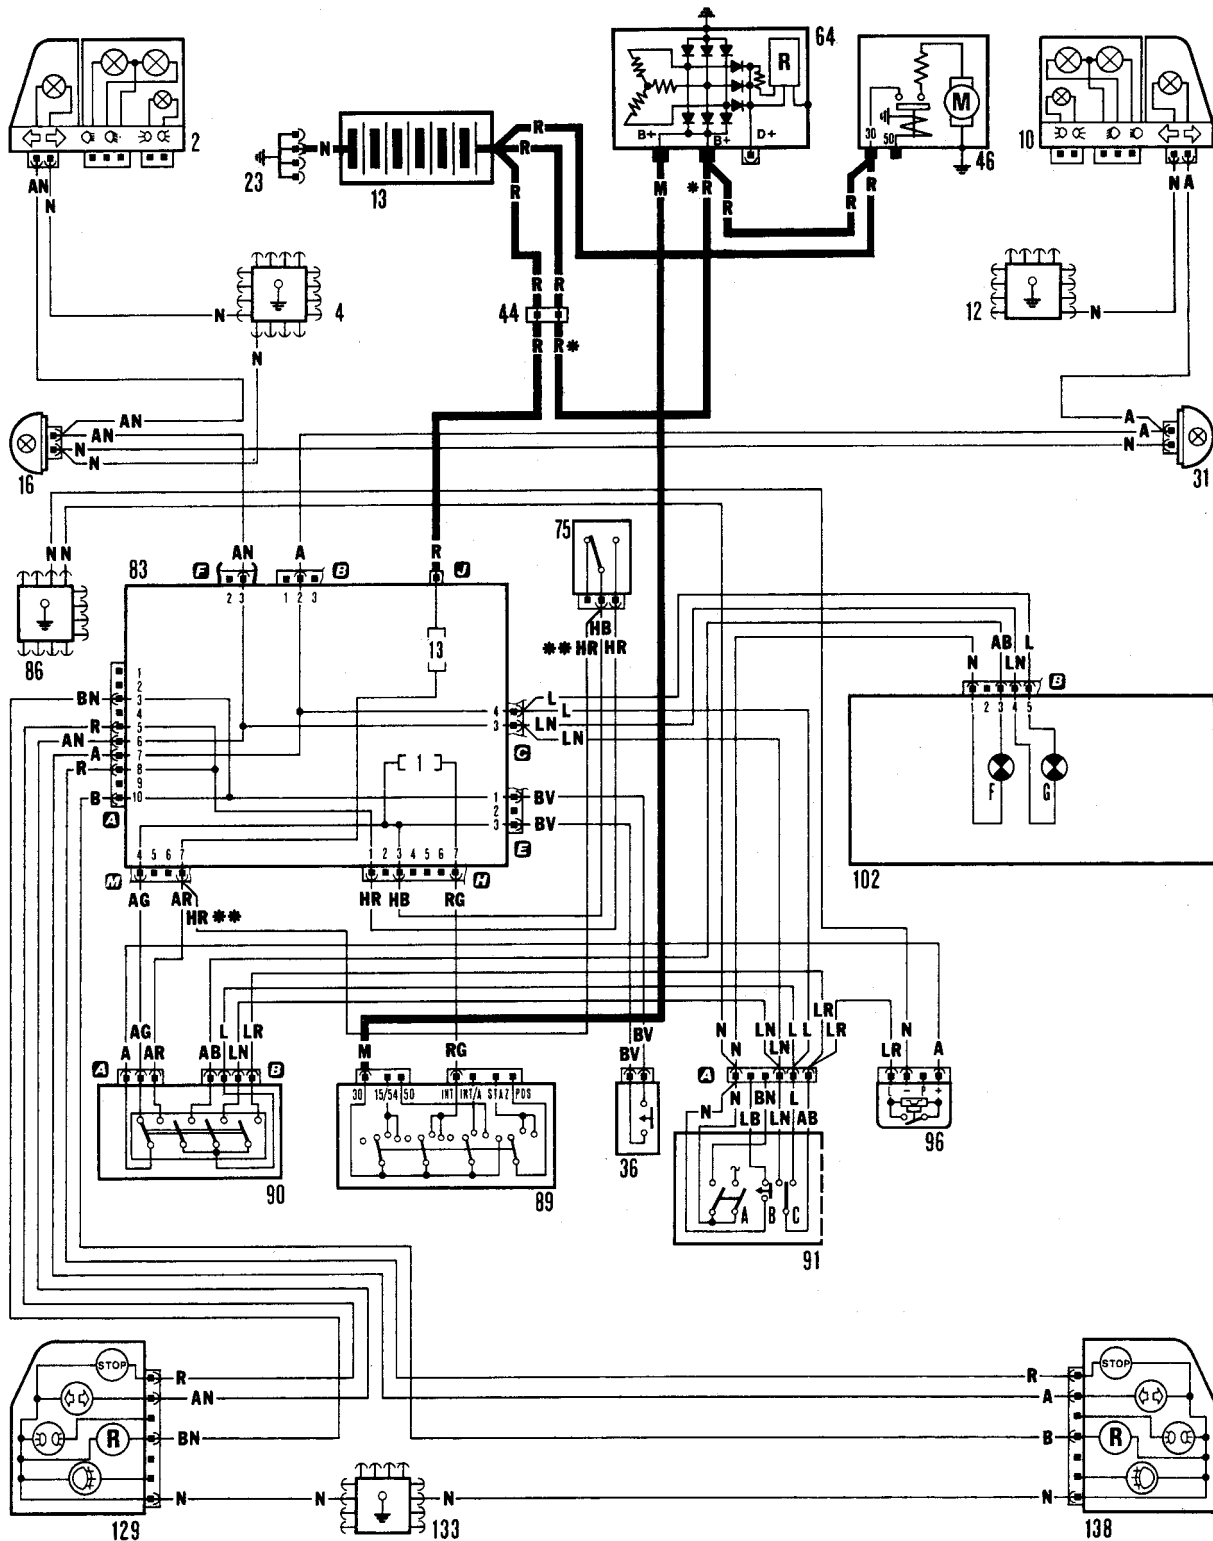


* Only for 1372 S i.e. - 1372 SX i.e. - 1697 D - 1367 Turbo D versions.
 ** Only for 903 - 999 - 999 S - 1108 S - 1372 S i.e. - 1301 D - 1697 D versions.

Wiring diagram 35 - direction indicators, hazard warning lamps, reversing lamps and brake stop-lamps (1990-on 45, 55, 70 and 1.4 models)

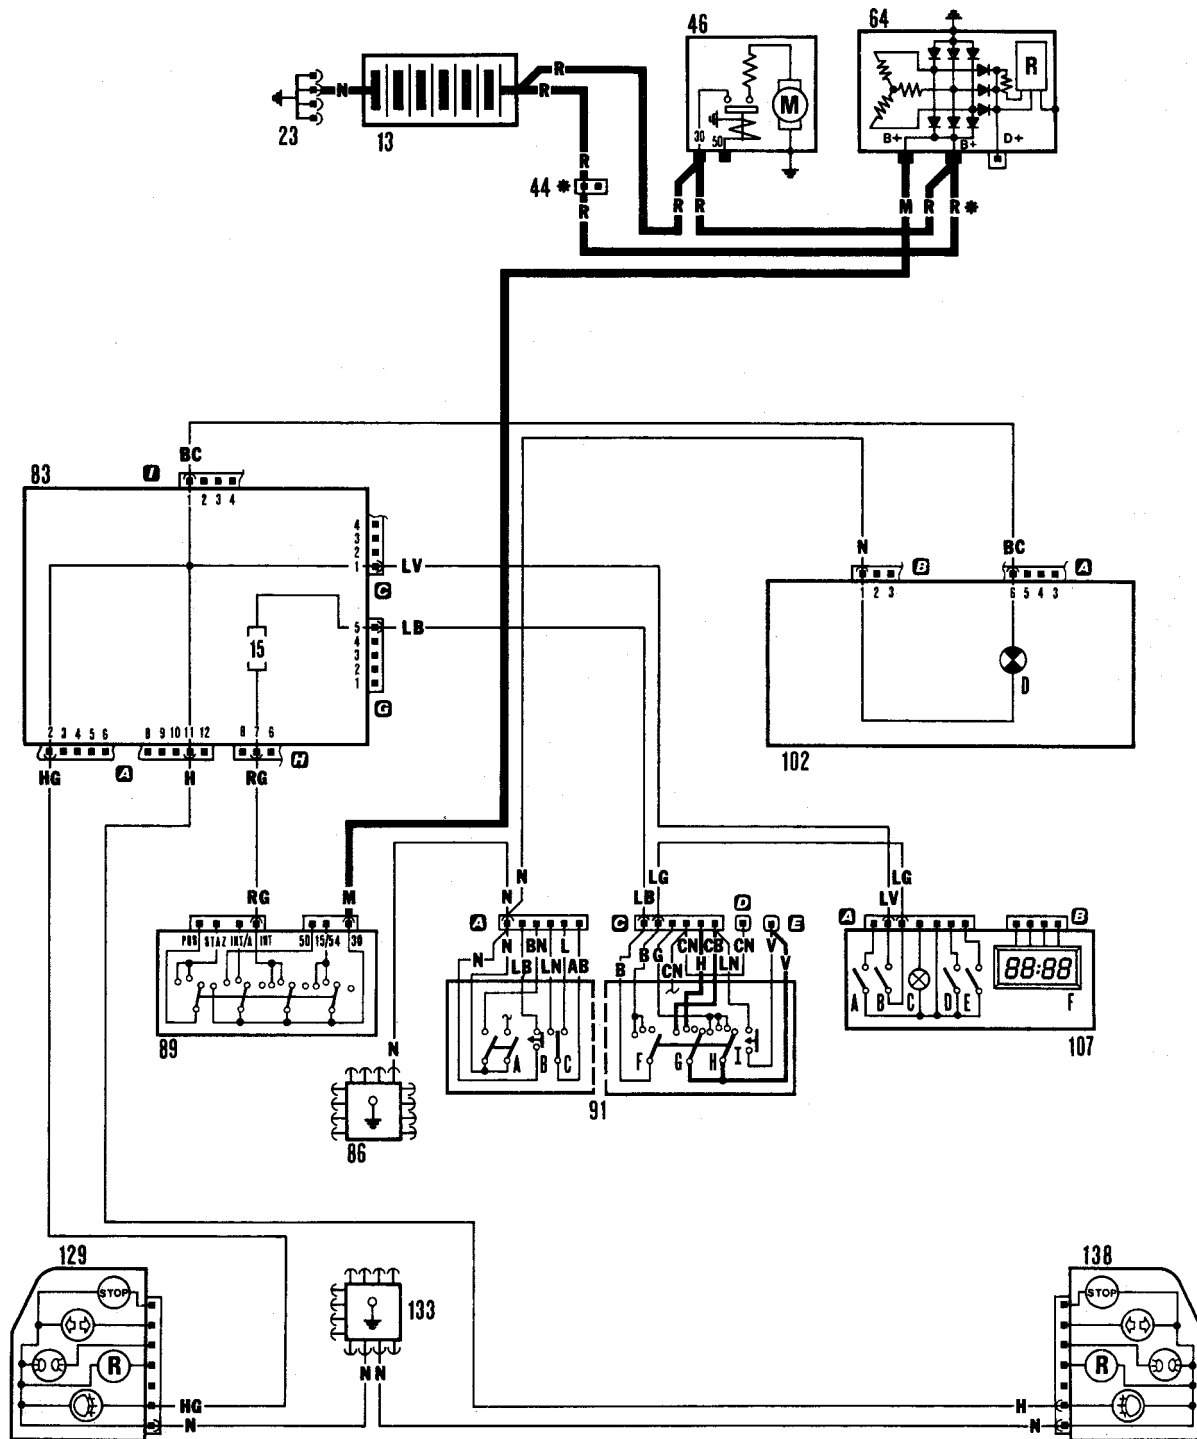

* Only for 1372 S i.e. - 1697 D versions


Wiring diagram 37 - rear foglamps (1990-on 45 and 55 models)

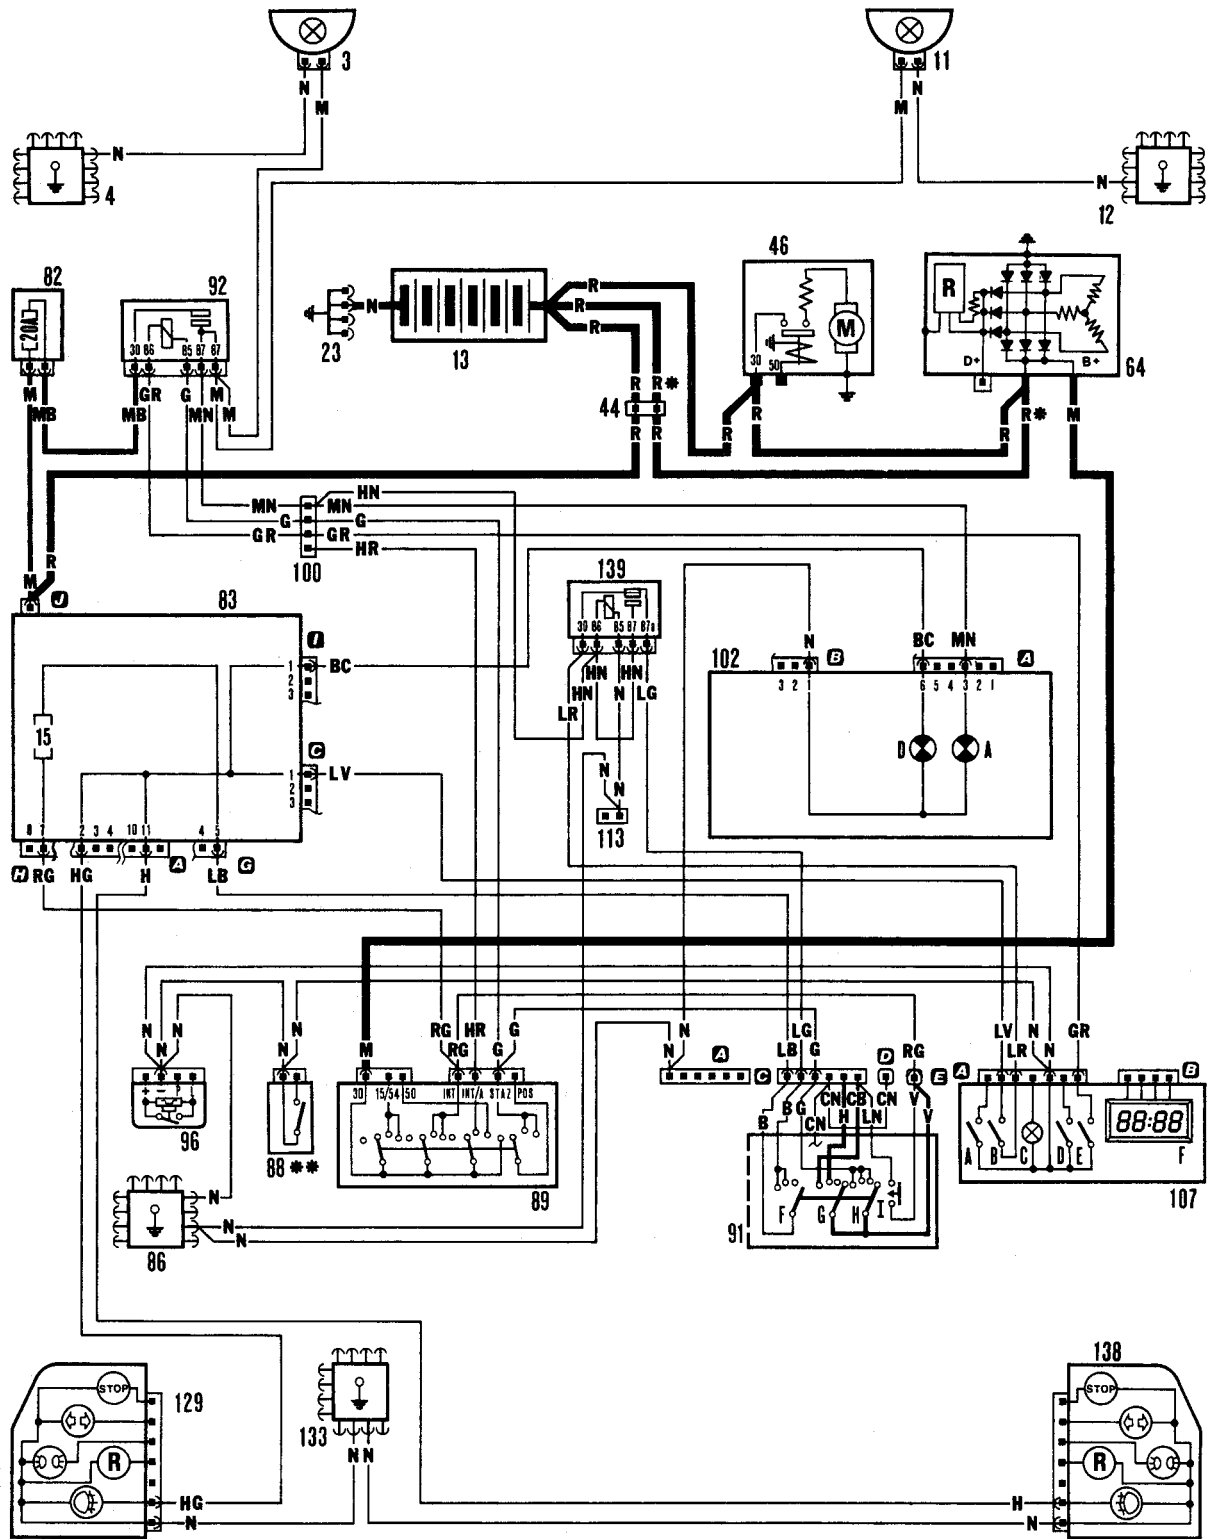

* Only for 1372 SX i.e. - 1367 Turbo D versions.


** Only for 999 SX - 1108 SX versions.

Wiring diagram 38 - front and rear foglamps (1990-on 70 SX and 1.4 models)

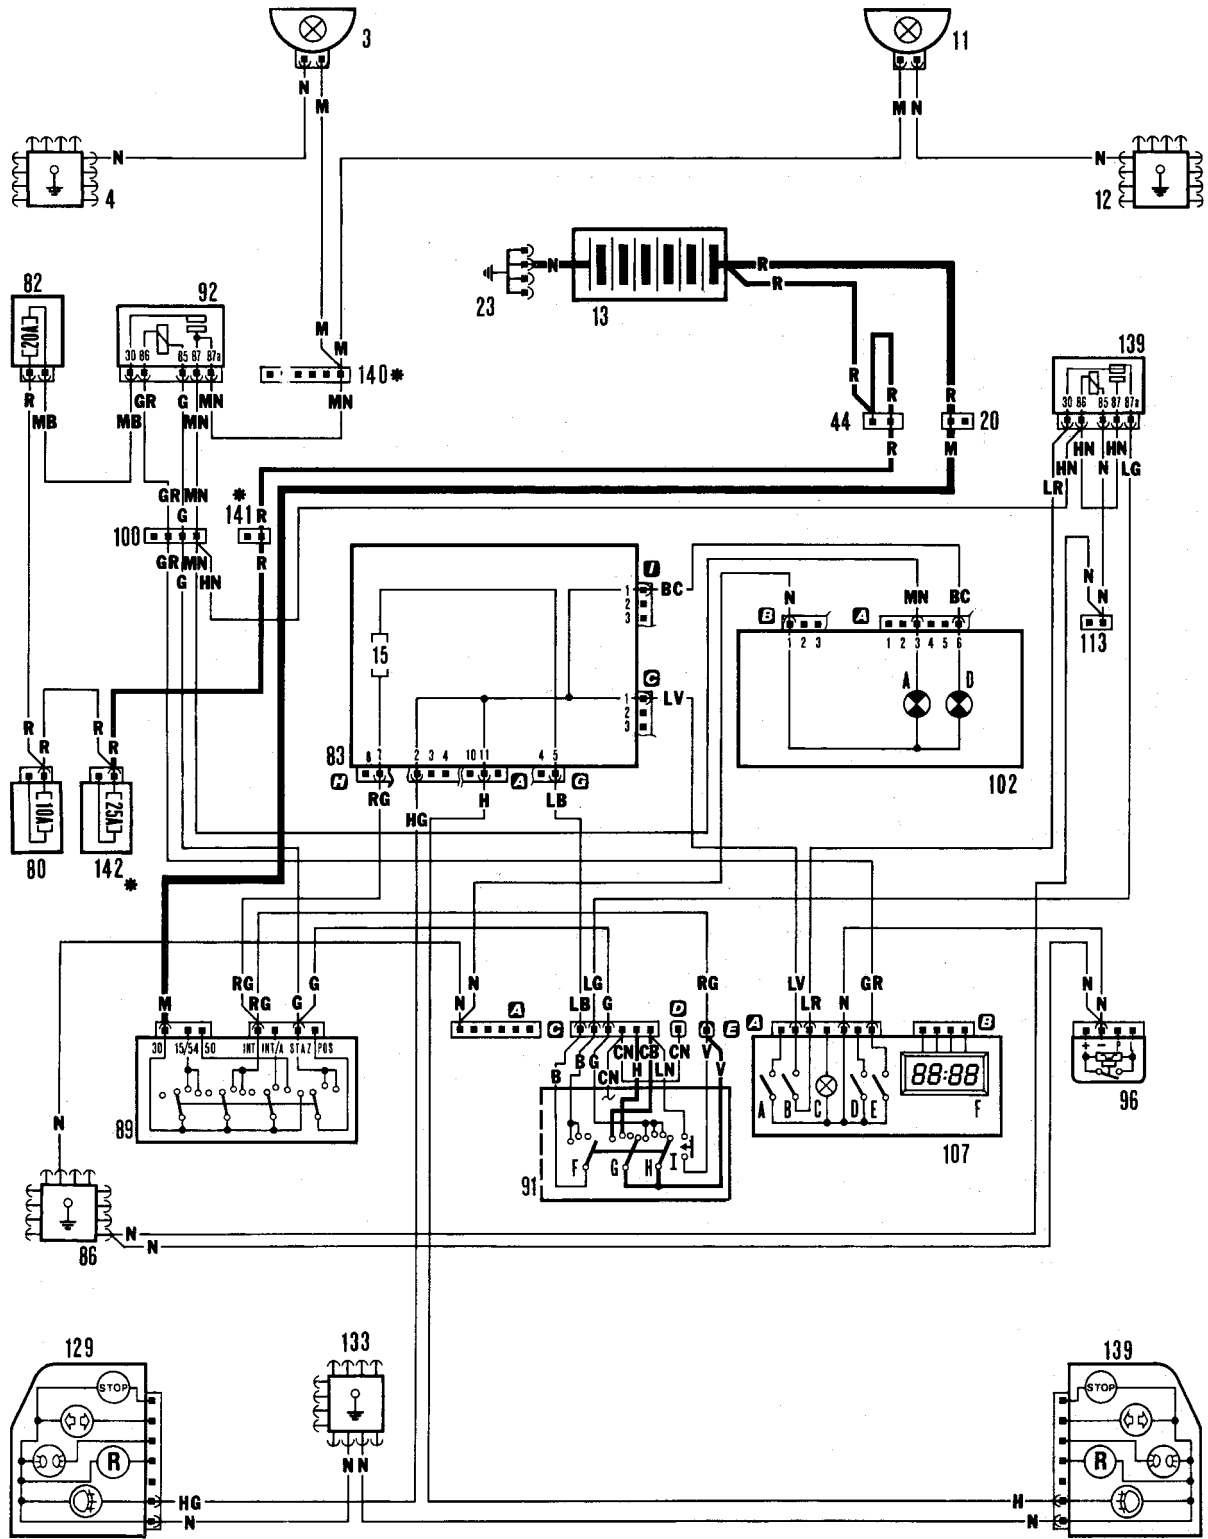

* Only for 1372 Turbo i.e. version with A.B.S. (AP)


Wiring diagram 39 - front and rear foglamps (1372 cc Turbo ie model)

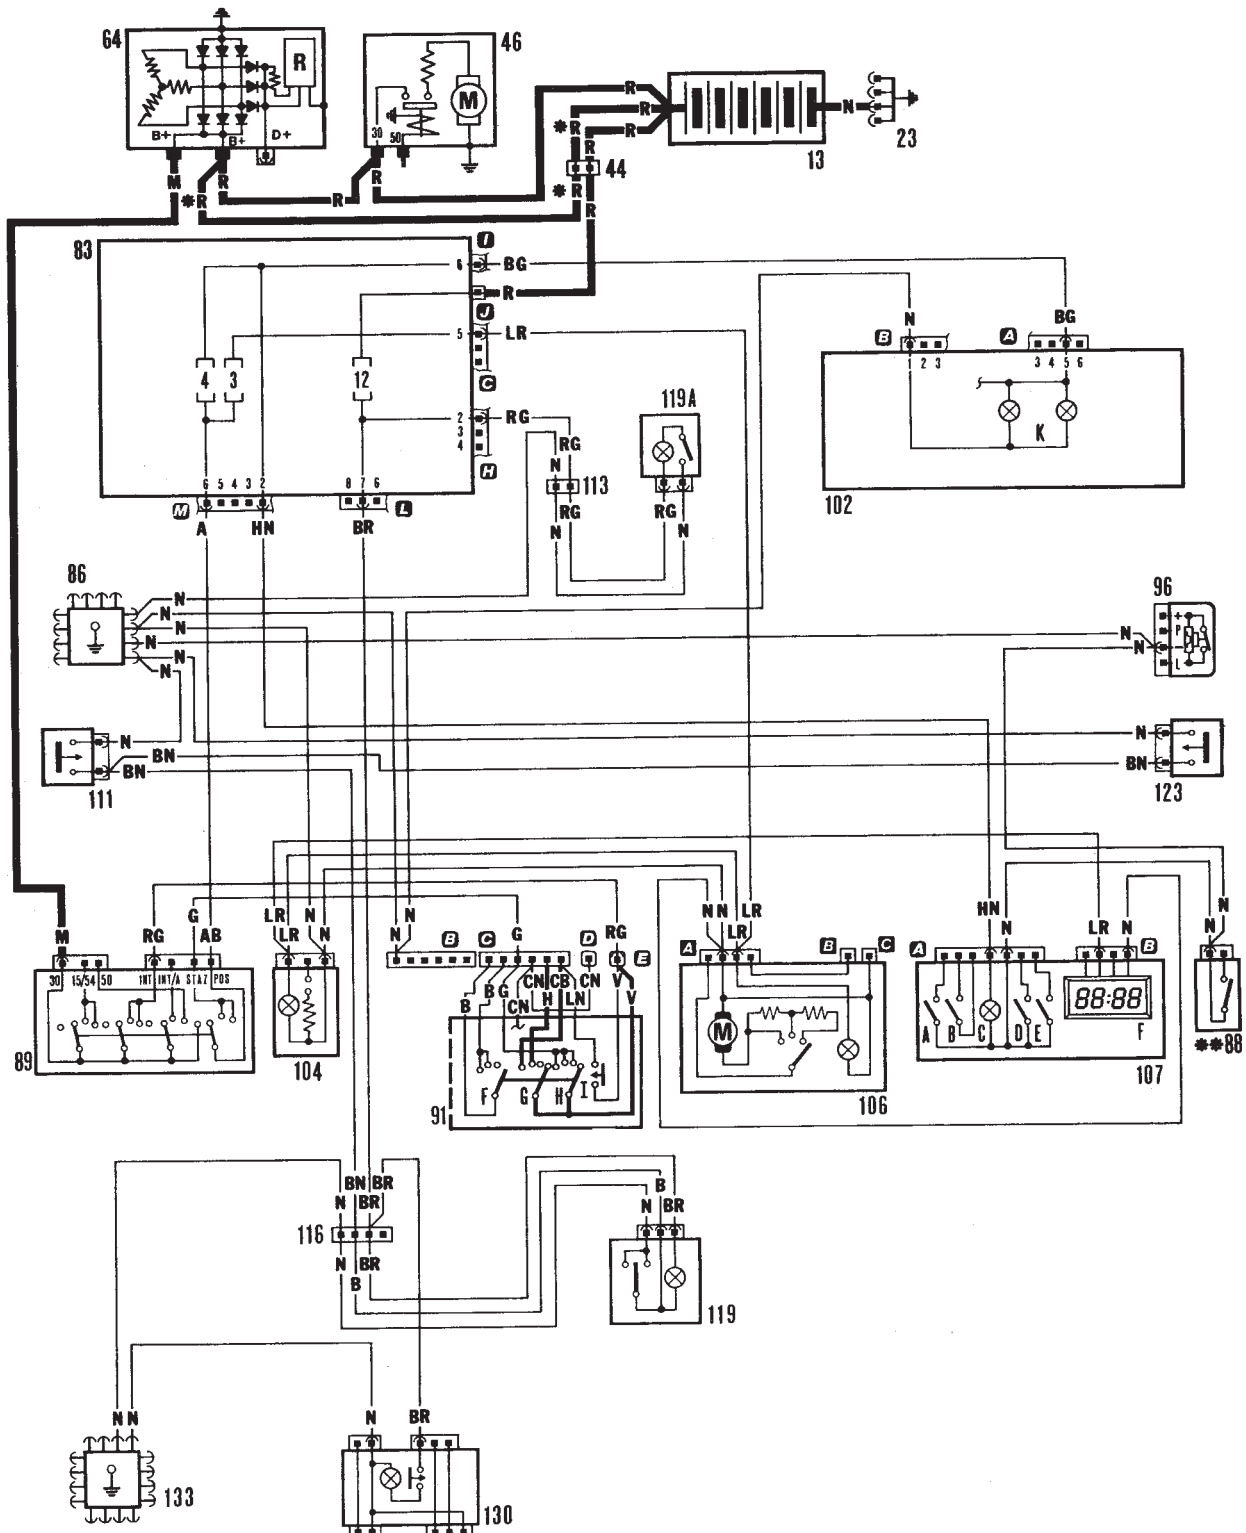


* Only for 1372 S i.e. - 1372 SX i.e. - 1697 D - 1367 Turbo D versions.

** Only for 903 - 999 - 1108 S - 1108 SX versions

Wiring diagram 40 - courtesy lamps and instrument panel lamps (1990-on 45, 55, 70 and 1.4 models)

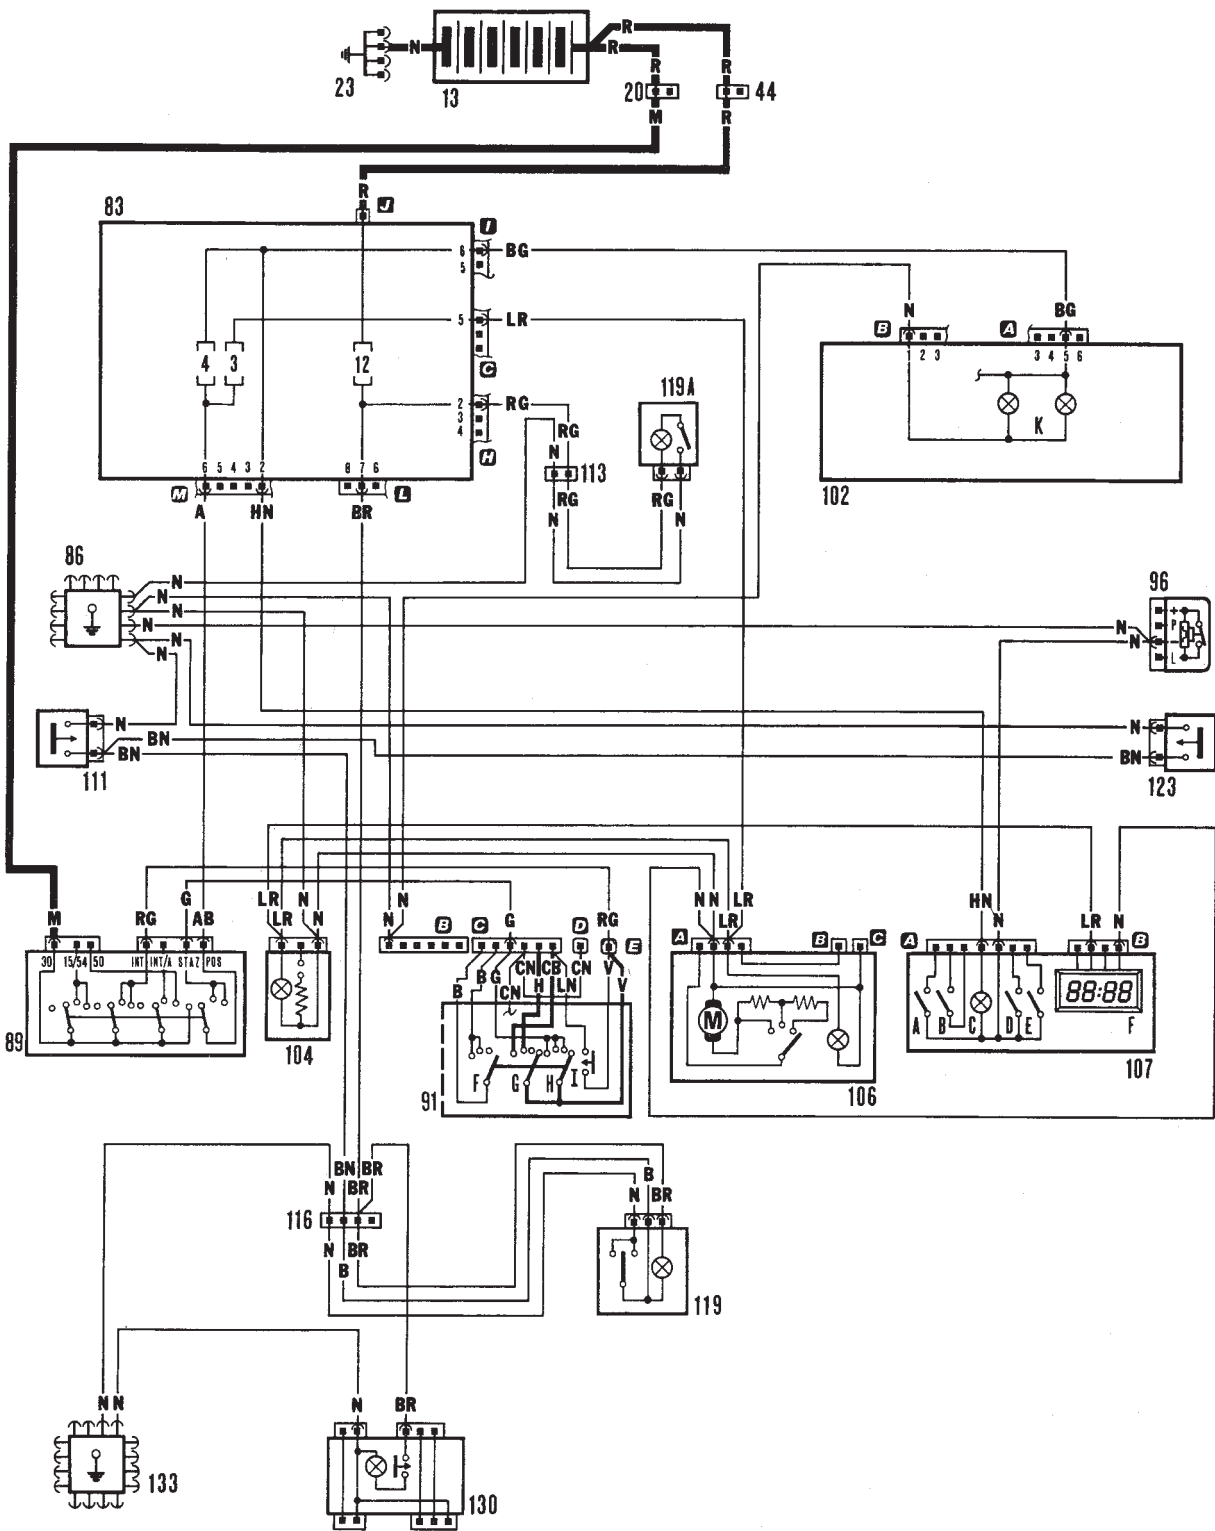

Wiring diagram 41 - courtesy lamps and instrument panel lamps (1372 cc Turbo ie model)

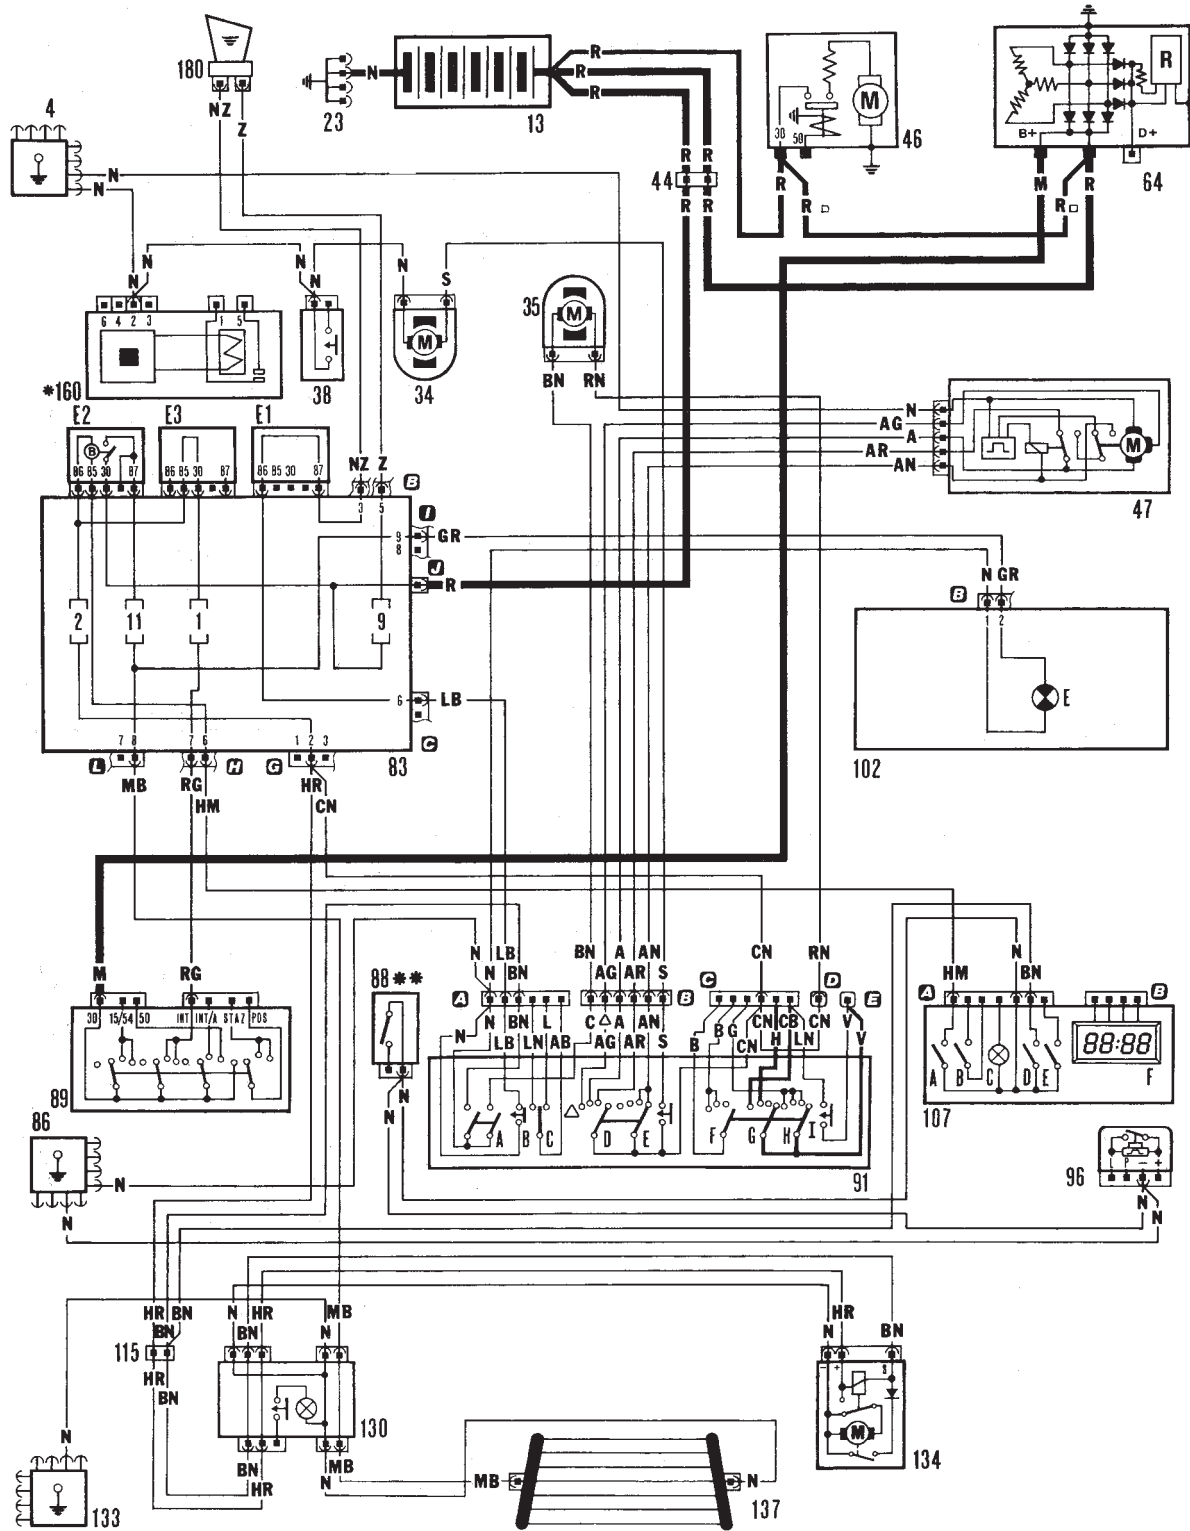


* Only for Diesel versions

** Only for versions with carburettor

△ Only for 999 S - 1108 S - 1372 S i.e. versions


□ Only for 903 - 999 - 1108 S - 1301 D versions

Wiring diagram 42 - horns, heated rear screen and windscreen/rear screen wash/wipe (1990-on 45 and 55 models)

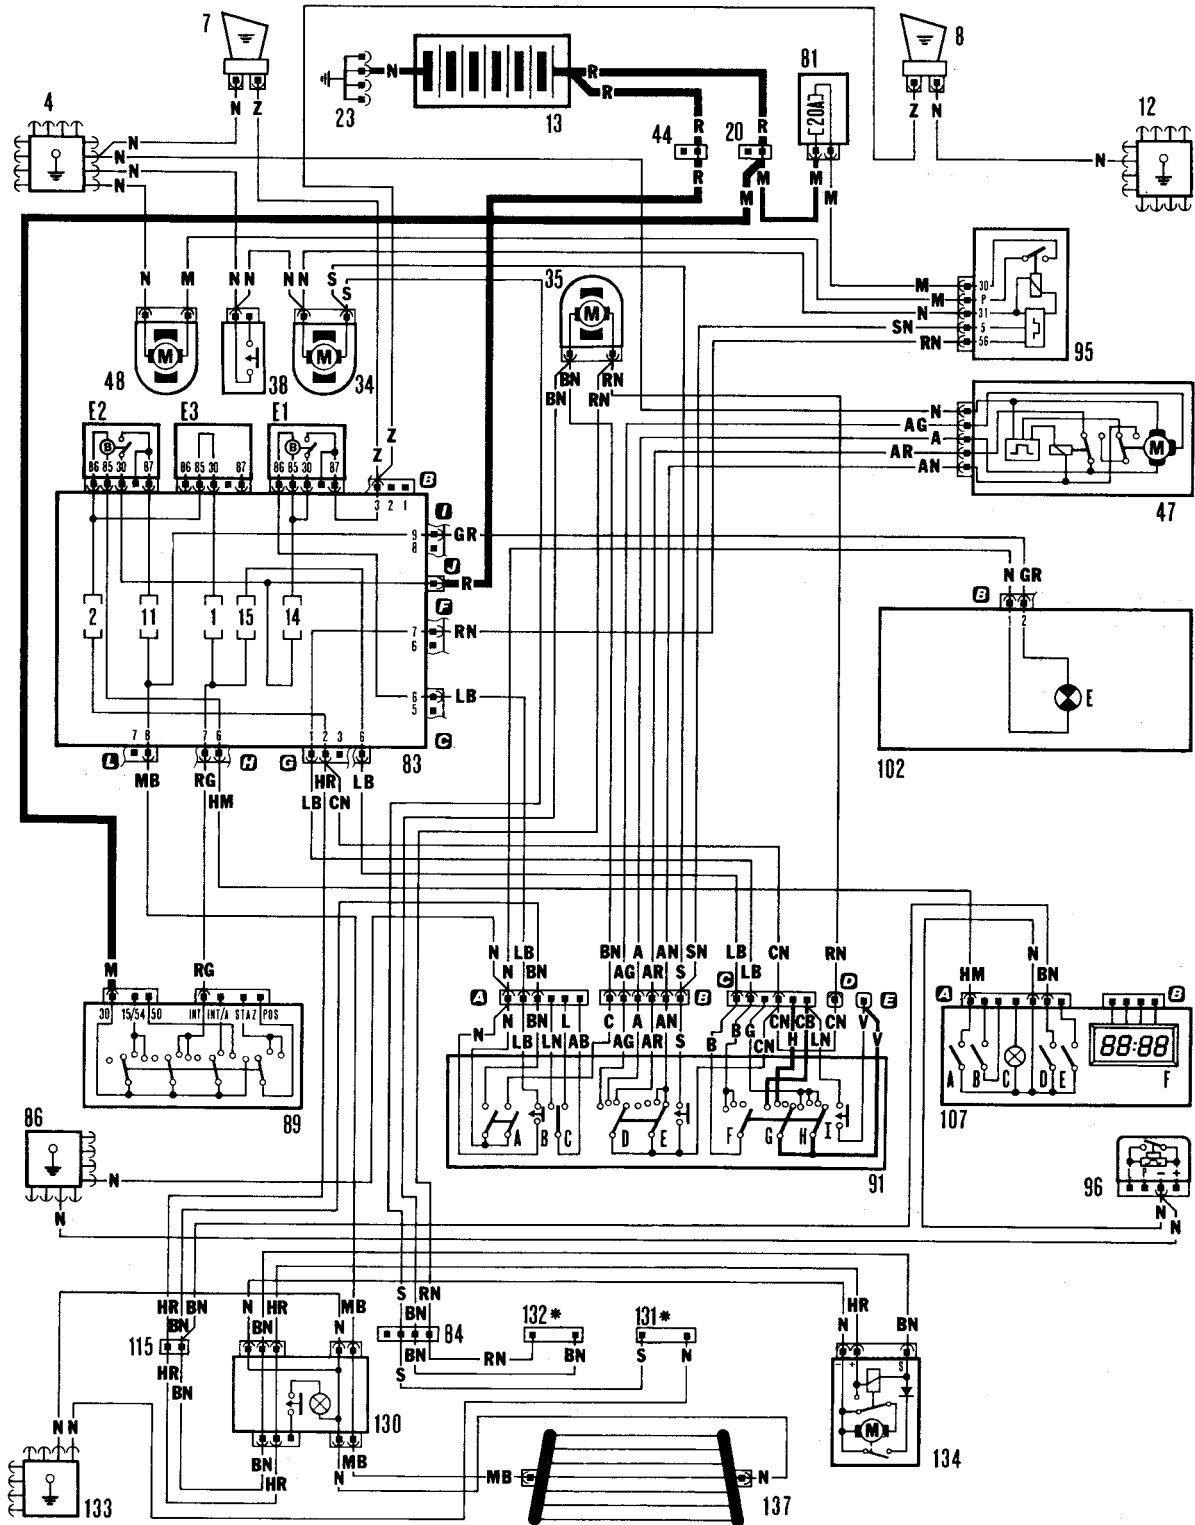

* Location of electric pumps Nos. 34 and 35 if optional headlamp washer is connected.

Wiring diagram 44 - horns, heated rear screen, windscreen/rear screen wash/wipe and headlamp wash/wipe (1372 cc Turbo ie model)

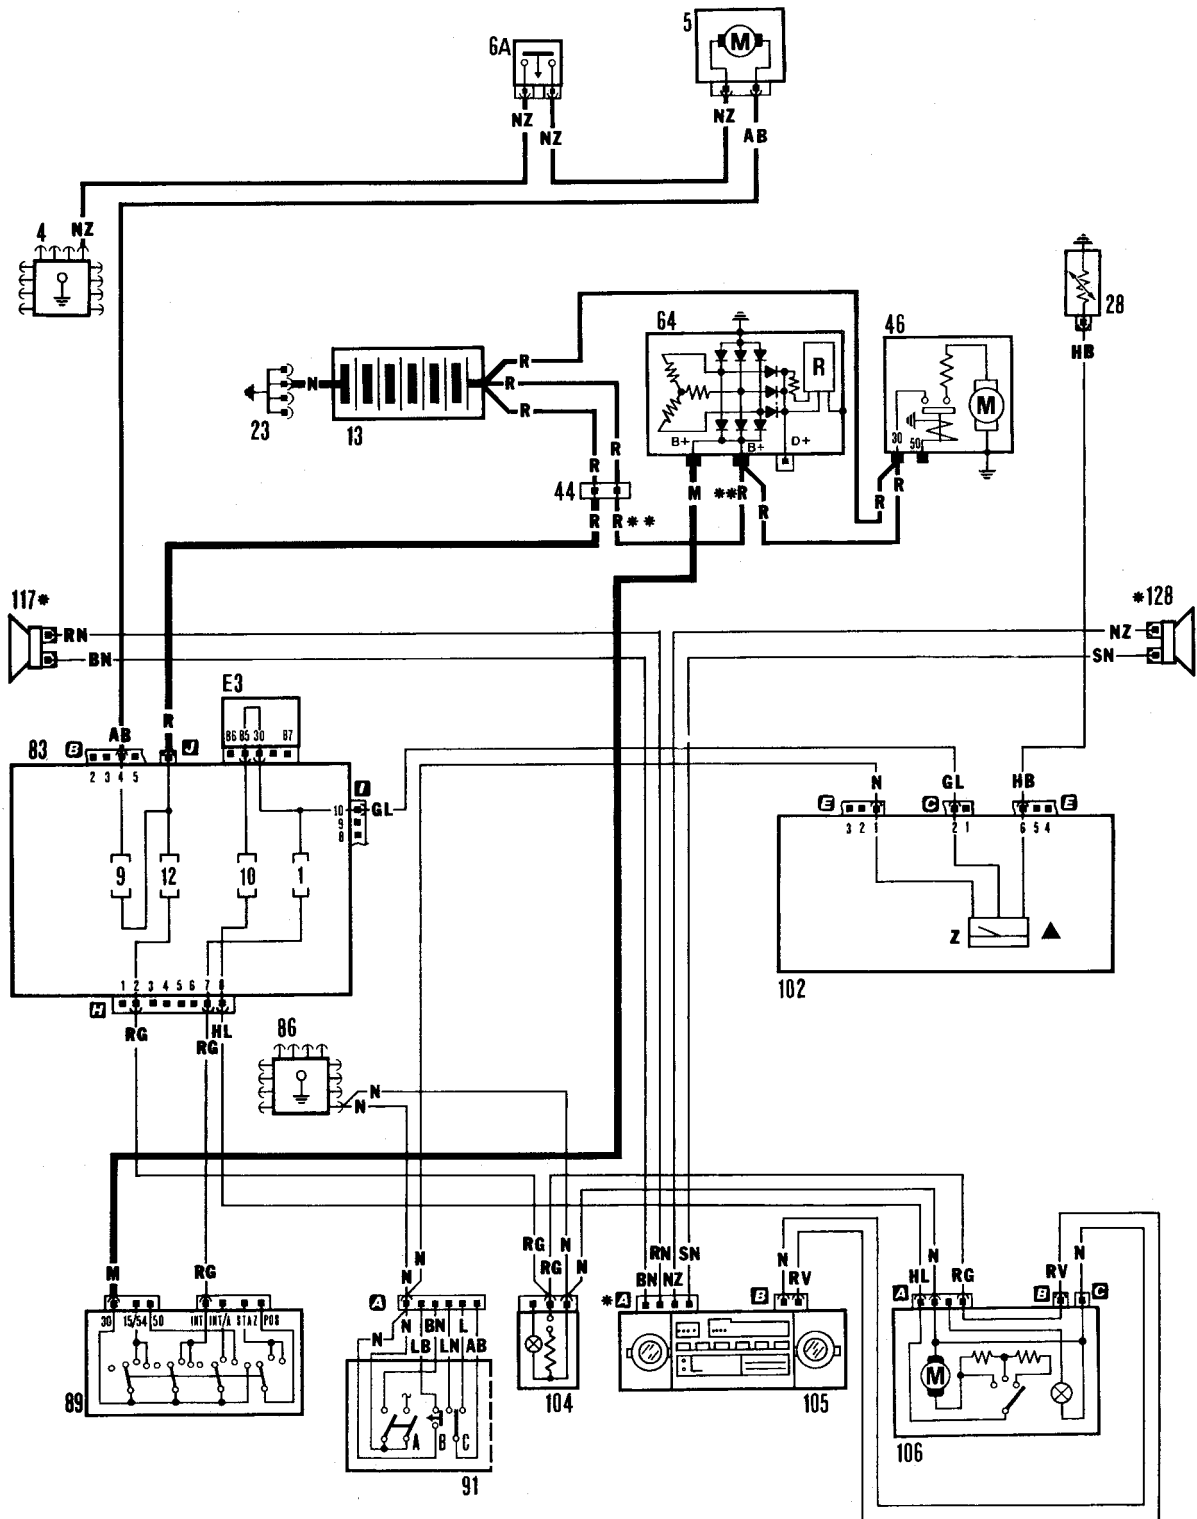


* Only for SX versions


** Only for 1372 S i.e. - 1372 SX i.e. versions

▲ For standard versions with 903 and 999 engines warning light only

Wiring diagram 45 - radiator cooling fan, heater, radio and cigar lighter (1990-on 45, 55, 70 and 1.4 models)

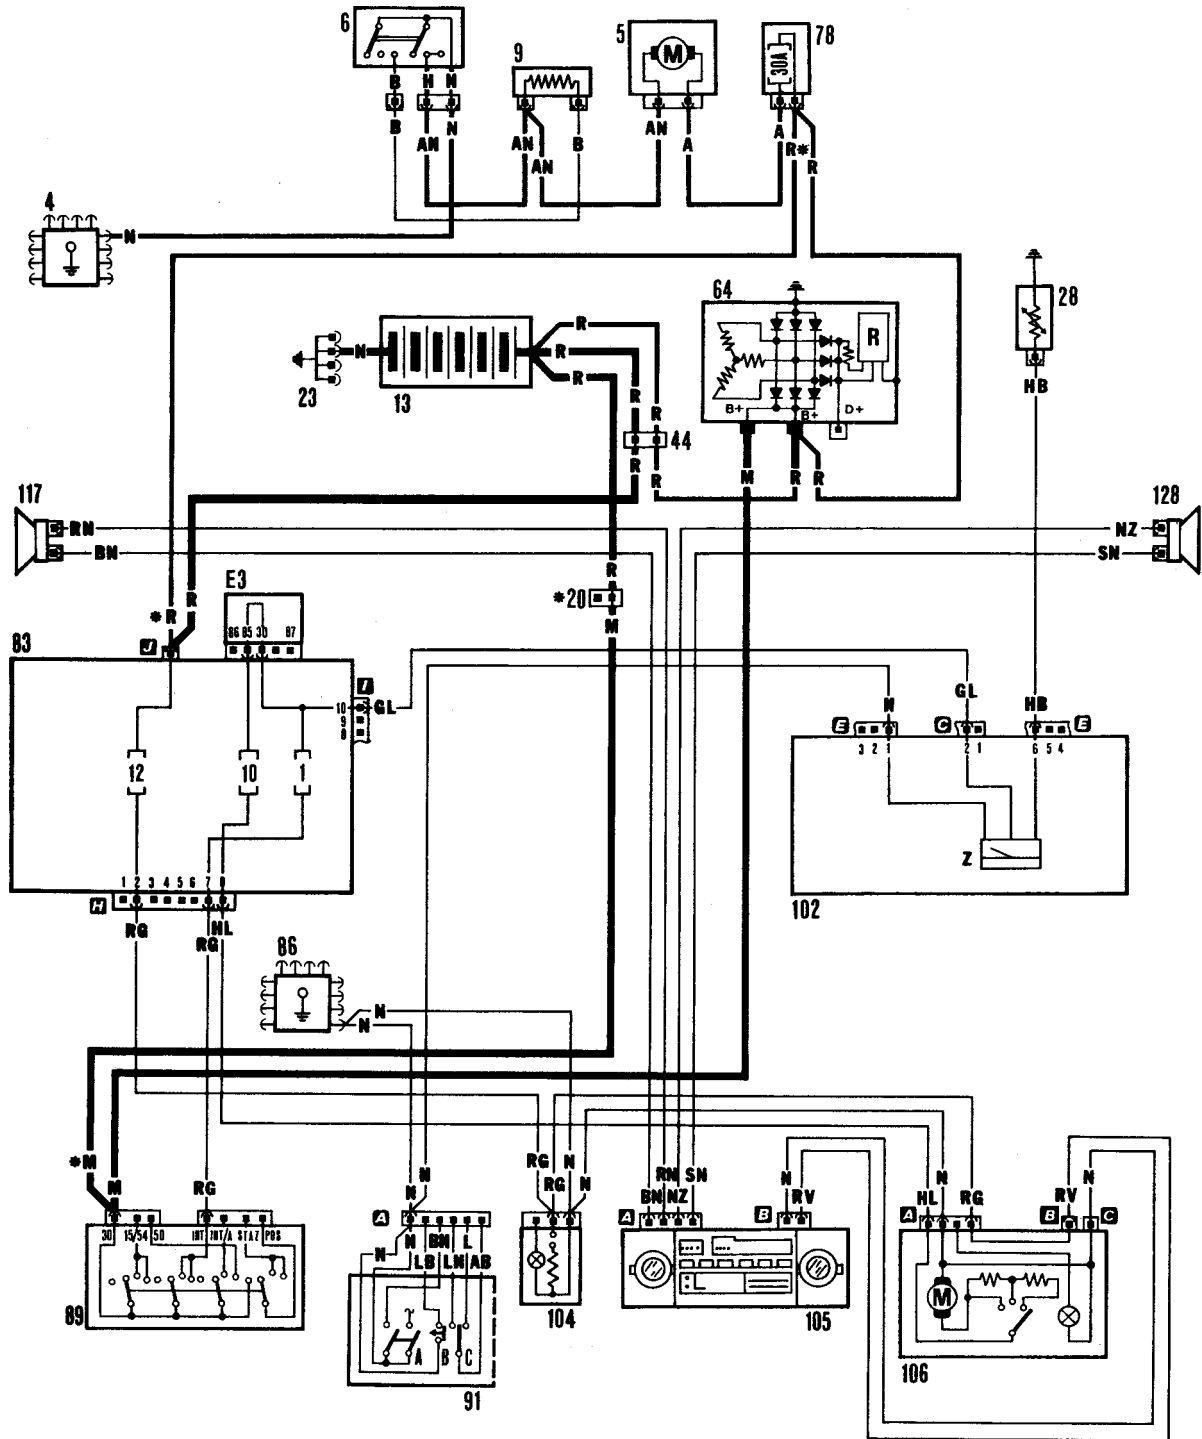


Wiring diagram 46 - radiator cooling fan, heater, radio and cigar lighter (1372 cc Turbo ie model)

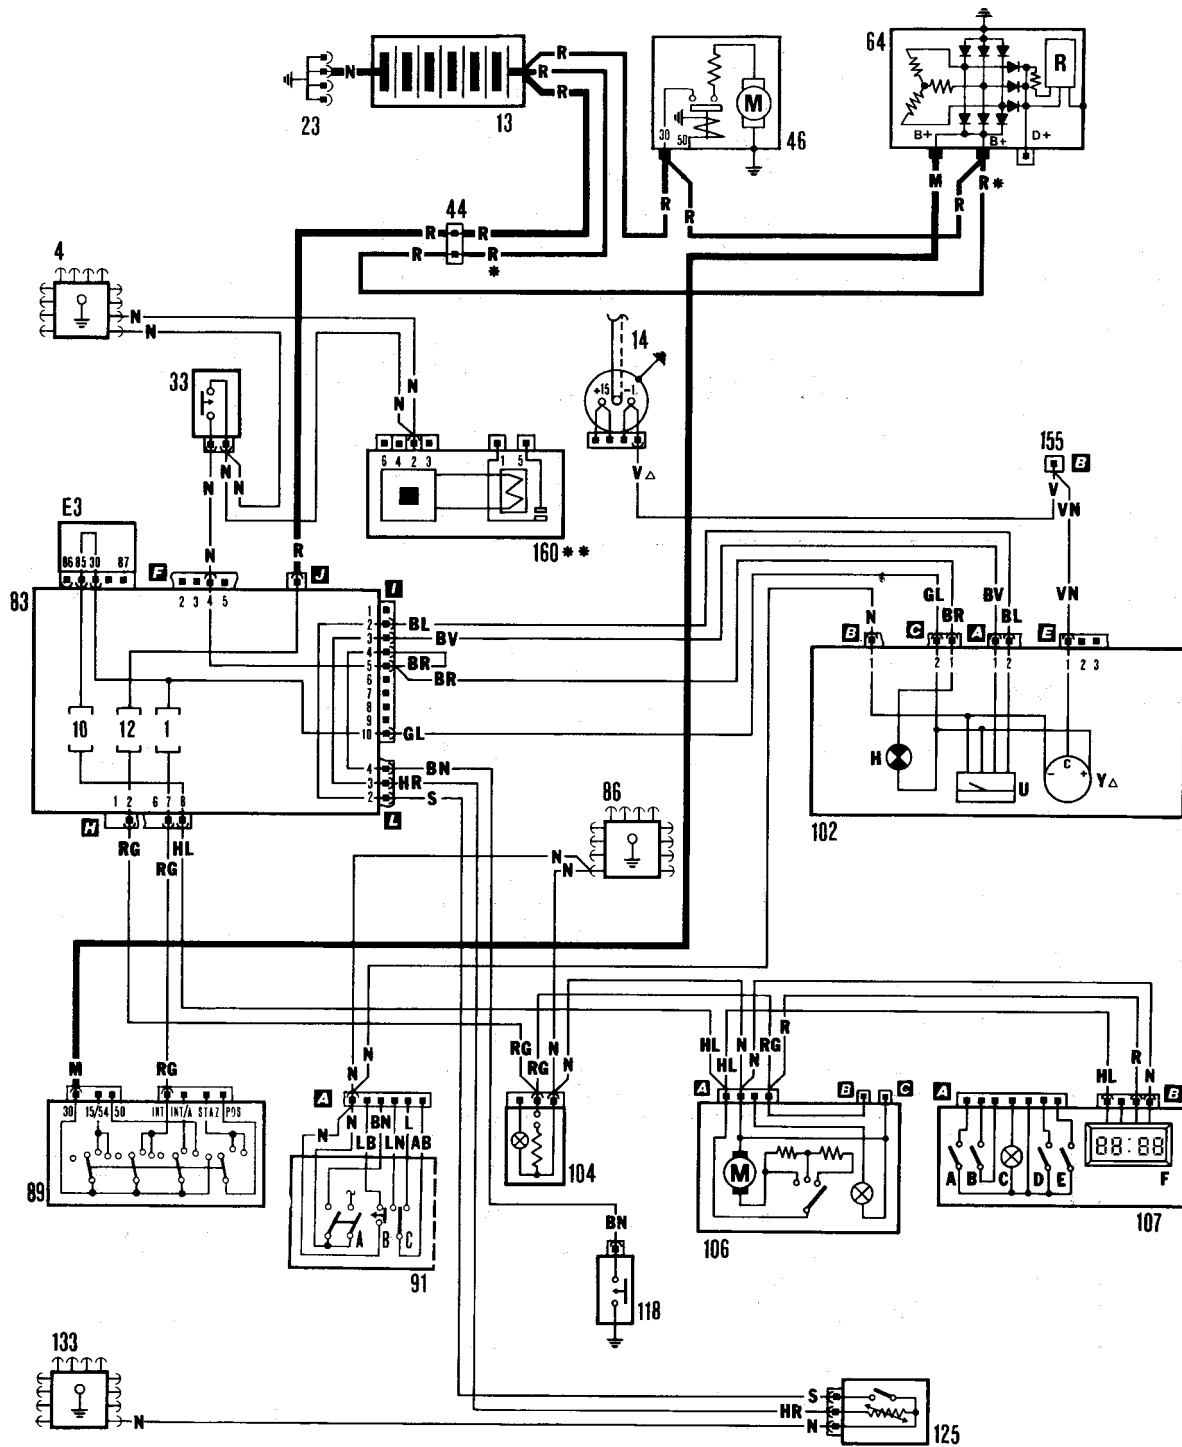


*Only for 1372 S ie - 1372 SX ie - 1697 D ** Only for D versions ▲ Only for SX versions

Wiring diagram 47 - fuel gauge, tachometer, digital clock, brake fluid and handbrake warning lamp (1990-on 45, 55, 70 and 1.4 models)

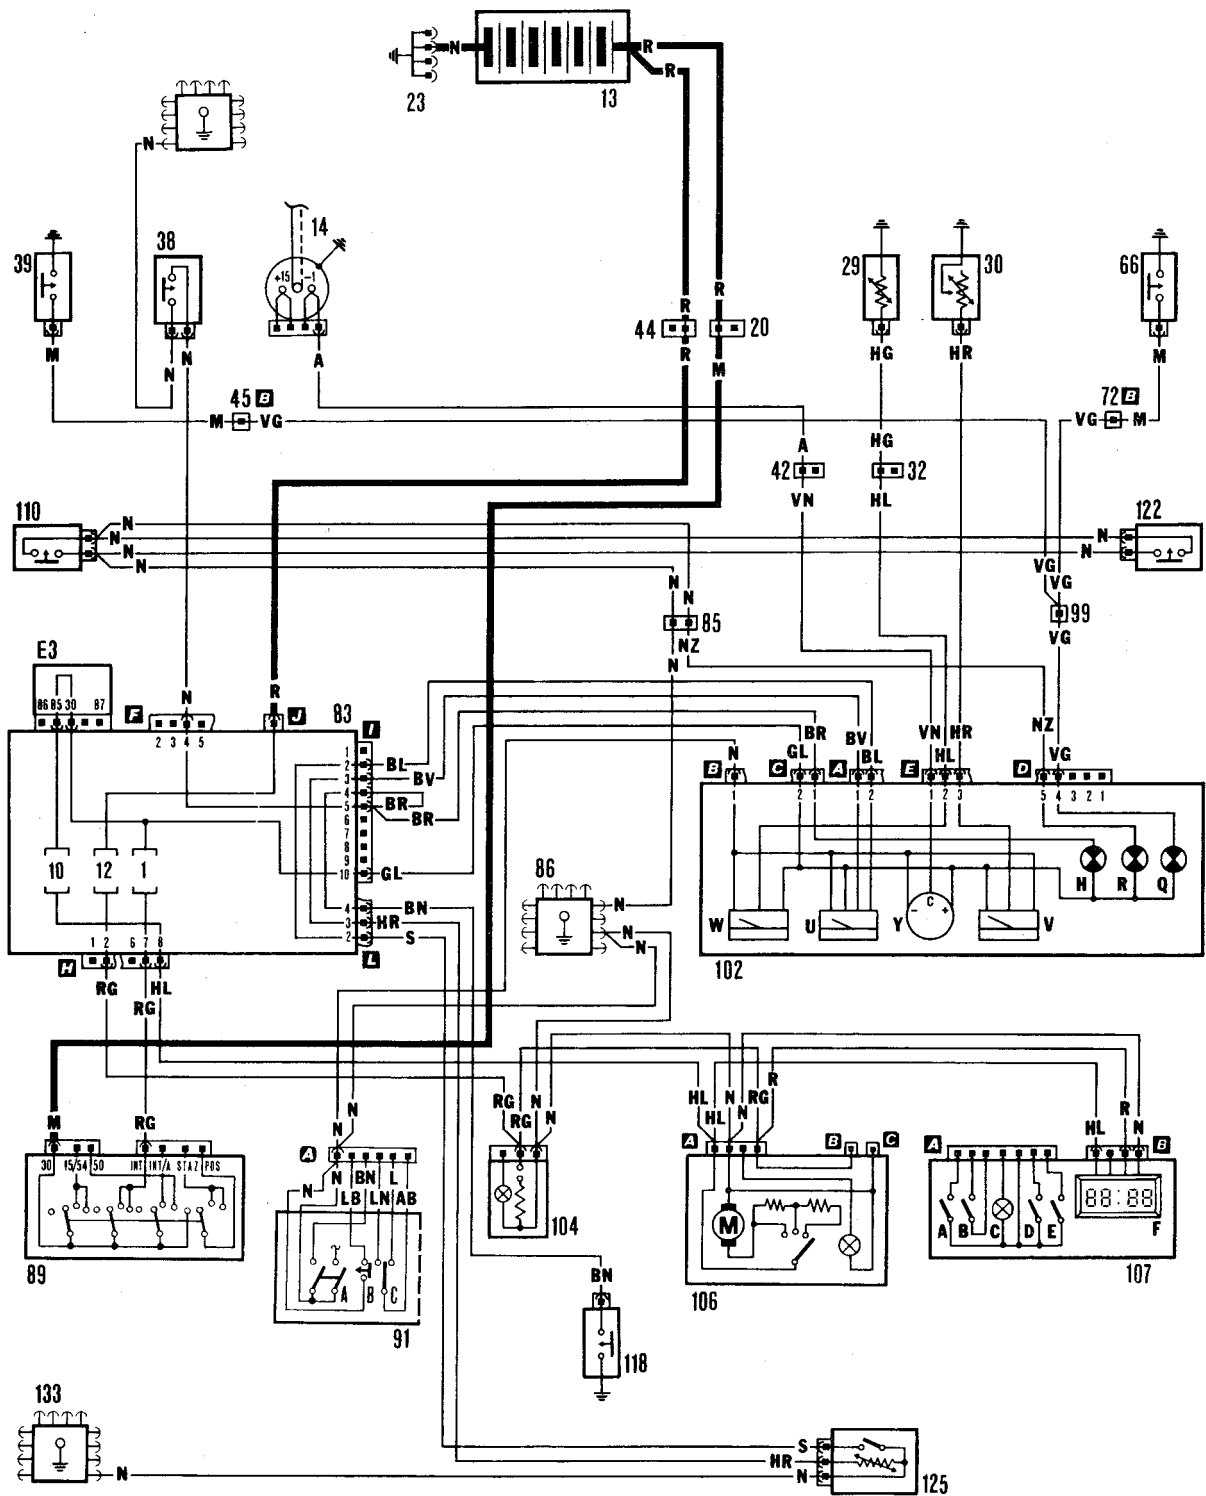

Wiring diagram 48 - fuel gauge, tachometer, digital clock, brake fluid level sensor, handbrake-on switch, brake pad wear sensor, door ajar switch and oil pressure/temperature sender units (1372 cc Turbo ie model)

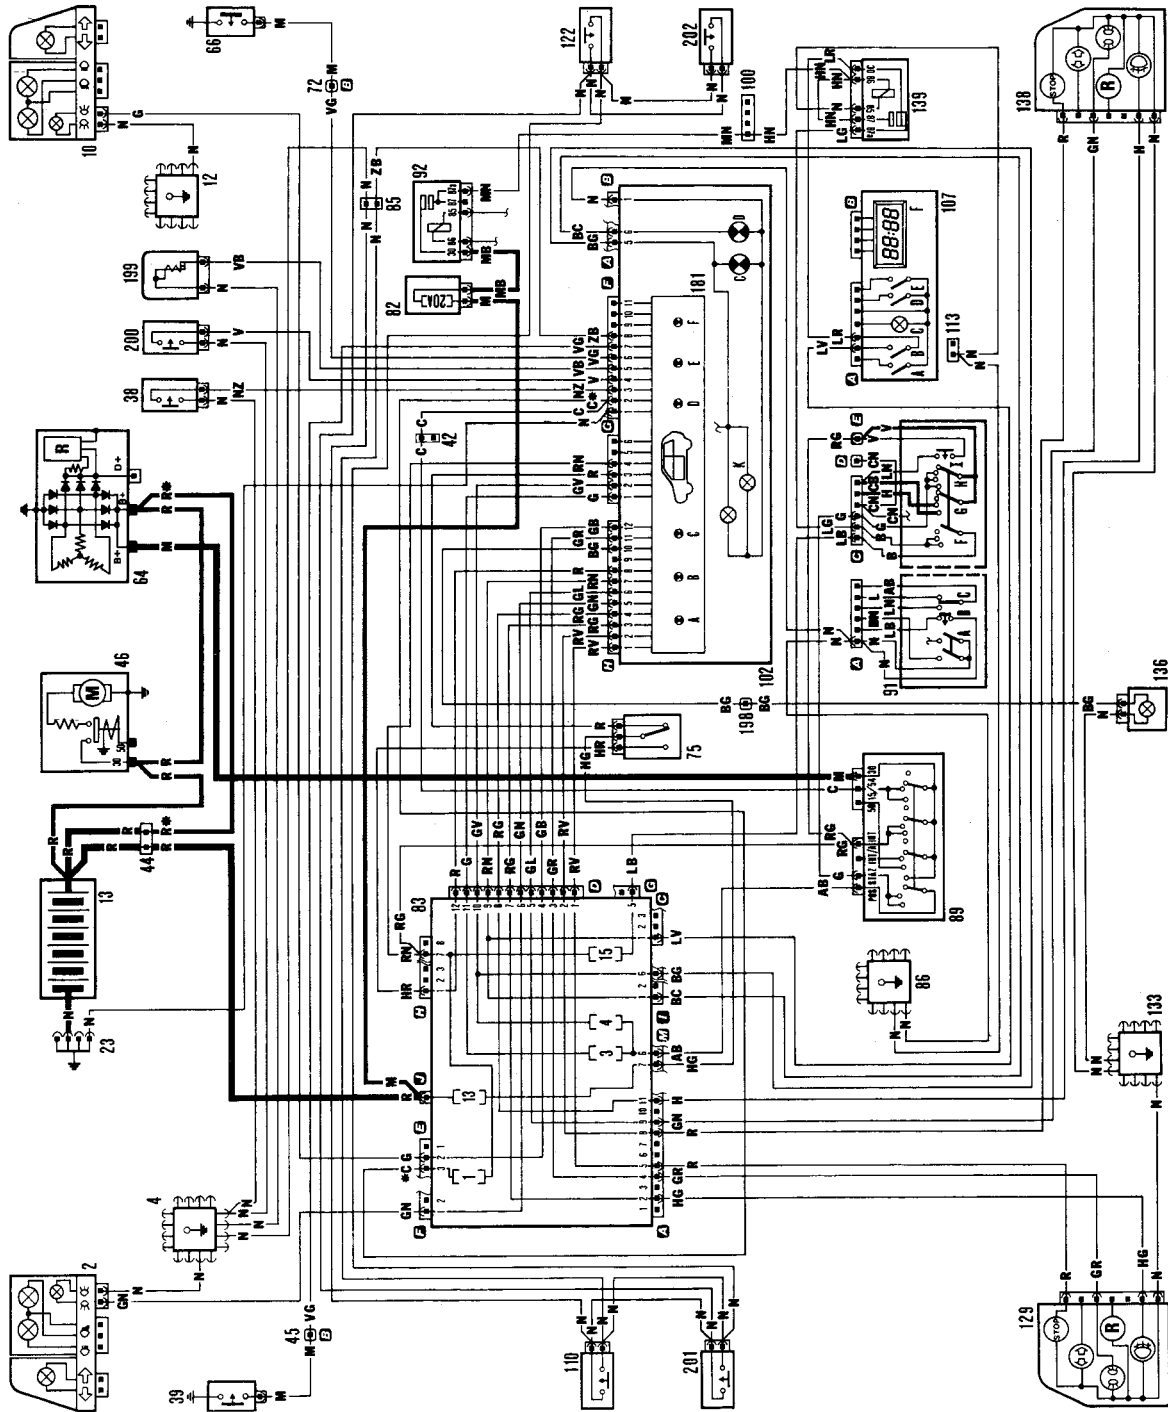

Wiring diagram 52 - check panel (1990-on 5-door models (3-door similar))

• Only for 1372 SX i.e. version